

105mm

150mm




SCR-2005
denver.eu
2024



SAFETY INFORMATION

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference
1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Product operating and storage temperature is from 10 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electric parts can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Do not use non original accessories together with the product as this can make the product functionality abnormal.
8. Please protect your eyes and do not look directly into the lightning prism when product is operating.
9. This product does not support harmonized charging

 ENG 1

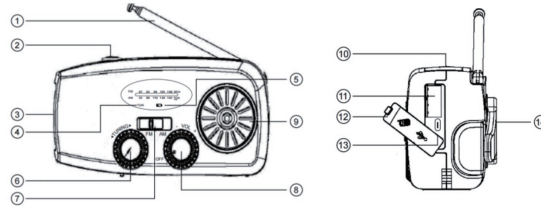


1. Radio antenna
2. Flashlight power button
3. Flashlight
4. Radio tuner indicator
5. Charging indicator
6. Radio tuner dial knob
7. Radio band switch FM / AM
8. Radio power ON / OFF and volume adjustment knob
9. Speaker
10. Solar panel
11. USB-A output port
12. Rubber cover
13. USB type-C charging port
14. Hand crank

USB CHARGING / SOLAR CHARGING / HAND CRANK CHARGING (3 ways of charging)

1. It is recommended to completely charge the battery first before using the radio. Power off the radio and connect the USB type-C cable (included) to the charging port on the radio and connect the other end of the cable to a computer, laptop or a mobile phone charger DC 5V. The red LED charging indicator flashes while charging. When charging is completed, the red LED charging indicator will keep on.

ENG 2

 2. Place the radio under the sunlight. The red LED charging indicator will light up while charging.
3. Turn the hand crank clockwise or counterclockwise for 3-5 minutes to charge the battery partly. The red LED charging indicator will light up while charging.

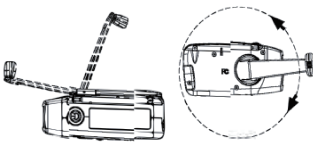

Note: 10 min hand cranking gives 44 min of FM radio at low-medium volume

HOW TO USE THE RADIO

1. Pull the radio band switch to left or right to select FM or AM and extend the radio antenna.
2. Turn the radio power ON/OFF knob clockwise to turn on the radio and control the volume at the same time.
3. Turn the radio tuner dial knob clockwise or counterclockwise to search for a radio station. When a radio station is being received, the green LED radio tuner indicator will light up and keep on.

HOW TO USE THE FLASHLIGHT

1. Press the flashlight power button to turn the flashlight on.
2. Press the flashlight power button the second time to turn the SOS light on.
3. Press the flashlight power button the third time to turn the flashlight off.

ENG 3

CHARGING YOUR MOBILE PHONE

1. Open the rubber cover on the side of radio.
2. Connect the USB-A connector of the charging cable to the USB-A output port on the radio and connect the other end of the cable to your mobile phone. Charging of your mobile phone will start automatically.

Specifications:

AM/FM radio
LED flashlight
SOS light
Solar panel for charging
Handcrank for charging
Built-in 2000 mAh battery
USB output for phone charging
Small and compact


ENG 4

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED,
COPYRIGHT DENVER A/S



 denver.eu

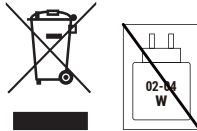

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

ENG 5

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislation and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type xxxx is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on top line of website. Write model number: xxxx. Now enter product page, and RED directive is found under downloads/other downloads.
Operating Frequency Range: FM 87-108MHz / AM 520-1620KHz
Max Output Power: 2W

DENVER A/S
Omega 5A, Soeflen
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

ENG 6

Contact

Main contact point: contact.hq@denver.eu

Nordics
Headquarter
Denver A/S
Omega 5A, Soeflen
DK-8382 Hinnerup
Denmark
Phone: +45 86 22 61 00
(Push "1" for support)
E-Mail: support.de@denver.eu

E-Mail
For technical questions, please write to:
support.hq@denver.eu
For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Binnenlandsweg 15C-D
3445 HE, Voorschoten
The Netherlands
Phone: 0900-3437923
E-Mail: support.nl@denver.eu

Spain/Portugal

DENVER GROUP S.A.
Barrida Augustina y Louis Lumiere, nº 23 - nave 16
Parque Tecnológico
46100 BURJASSOT
Valencia (Spain)
Phone: +34 960 046 883
E-Mail: support.es@denver.eu

Portugal
Phone: +35 1255 240 294
E-Mail: denver.service@satfiel.com

Germany

Denver Germany GmbH Service
Max-Emanuel-Str. 4
94056 Passau
Phone: +49 851 379 369 40
E-Mail: support.de@denver.eu

Fairfix GmbH
Repair and service
Bühlstr. 100-102, 3. TOR 2
53859 Niederkräfft
Phone: +49 851 379 369 69
E-Mail: denver@fairfix.de

For TV & Mobility/Powerboards/Balenceboards, Smartphones & Tablets

Austria

Lufi Premium Service GmbH
Deutschstrasse 1
1220 Wien
Phone: +43 1 904 3085
E-Mail: denver@lufi-service.at

Poland

LetMeRepair Poland sp. z o.o.
ul. Czestochowska 140
62-800 Kalisz
Phone: 62 75 58 092
E-Mail: denver-service@letmerepair.pl
Godziny pracy: 8 - 18 (poniedziałek - piątek)

If your country is not listed above, please write an email to support@denver.eu



Denver A/S
Omega 5A, Soeflen
DK-8382 Hinnerup
Denmark
[facebook.com/denver.eu](https://www.facebook.com/denver.eu)

