



DAB - 48
Denver.eu



FR

Cet appareil, ses
cordons, ses accessoires
et ses batteries sont
recyclables

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

 
Safety information

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.


1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
7. Bluetooth wireless technology operates within a range of about 10 m (30 feet). The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
8. Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices.
9. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
10. Only charge with supplied Adaptor. The direct plug-in adaptor is used as disconnect device, the disconnect device shall remain readily operable. So, make sure there is space around the power outlet for easy access.
11. Do not use non original accessories together with the product as this can make the product functionality abnormal.

Product overview

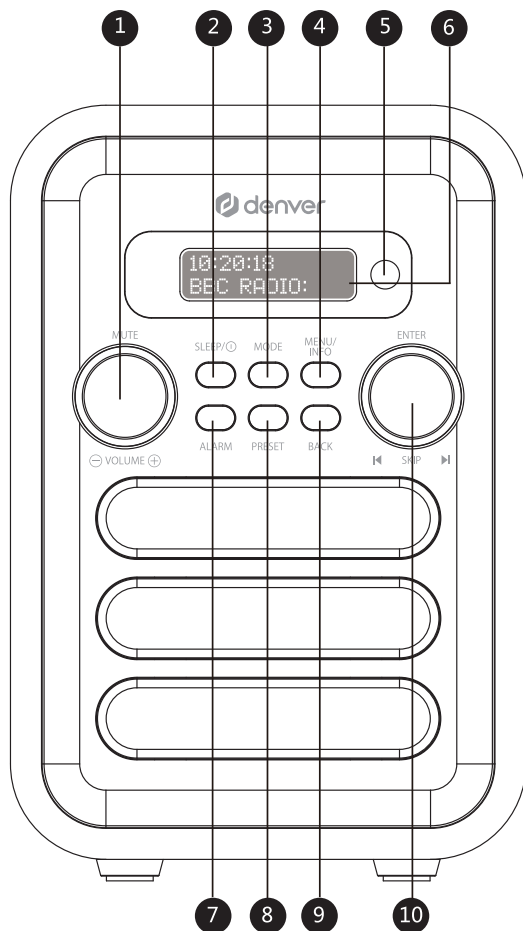

- 1 Volume Knob:**
 Turn clockwise to increase the volume, turn counter-clockwise to decrease the volume, press to mute/unmute the sound.
- 2 Sleep /Standby/Button:**
 Please long press Sleep/standby button to turn on DAB radio.Please long press Sleep/standby button to enter standby.
- 3 Mode Button:**
 Press to change the mode; press and hold to adjust the display brightness.
- 4 Info/Menu Button:**
 In any mode, press to display messages. Press and hold to enter the settings menu.
- 5 Remote Receiver Window:**
 Direct the remote control towards the receiver window.
- 6 LCD Display:**
 Shows the corresponding content during operation.
- 7 Alarm Button:**
 Press to enter the alarm settings menu.
- 8 Preset Button:**
 In DAB/FM mode, press to call out a preset station; press and hold to save a station.
- 9 Back Button:**
 Press to return to the previous menu level.
- 10 Rotary Knob:**
 Turn clockwise to skip to NEXT title; turn counter-clockwise to skip to PREVIOUS title; press to use as ENTER / SCAN button.

 Product overview

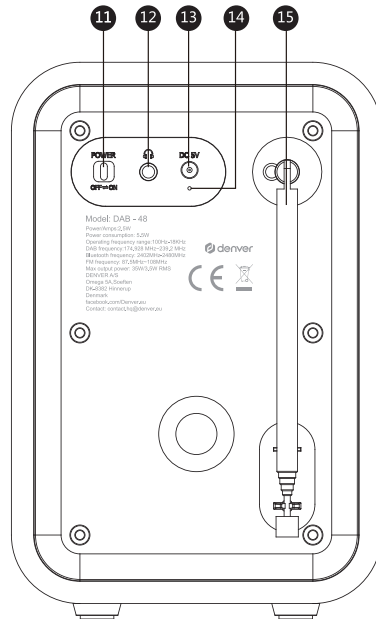

11 Power Switch:

Set to ON position to turn the radio on; set to OFF position to turn the radio off.

12 Headphone jack:

Supports standard 3.5 mm jack.

13 DC-In:

DC 5V power input.

 
14 Power indicator:

Lights up red when power is supplied via power adapter.

15 Antenna:

Extent carefully when listening to DAB/FM radio.

Remote control

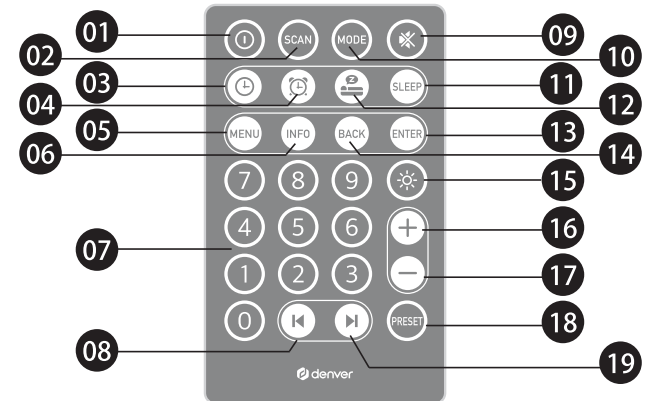

- 01 Short press standby button : Enter into mode/standby
- 02 DAB& FM mode: Short press to search station
- 03 Clock setting button :Short press to enter the clock setting interface
- 04 ALARM button: Short press enter into the alarm setting state
- 05 MENU button : Short press to enter the menu settings
- 06 INFO button : Short press to show information
- 07 Numeric button: Combined with numeric 0-9 keys, select the station or song serial number
- 08 SKIP- button:

DAB mode: Short press—Forward moving station FM mode: Short press -- Forward fine-tuning

Long press —Fast forward moving station Long press – forward semi-automatic platform search

Menu mode Short press-Forward moving station

- 09 MUTE button: ON/OFF
- 10 MODE button : Mode switch button for DAB/FM/BT/USB/TF Five modes to switch
- 11 In working mode, Short press to set Sleep: OFF/15/30/45/60/90 minutes
- 12 Snooze button: When the alarm sounds, short press to enter snooze function; in snooze function, short press to select snooze time.
- 13 ENTER key: DAB and FM mode--OK button BT mode--play/pause button In menu mode--confirm button.
- 14 BACK button Short press level-by-level return; when alarming, long press to cancel the alarm
- 15 Brightness key: LCD brightness adjustment key, three-section brightness adjustable;
- 16 VOL+ button: Volume up
- 17 VOL- button: Volume down
- 18 PRESET button : Short press -- to enter the interface of calling out radio station
long press -- to enter the interface of pre-stored radio station
- 19 SKIP+button: DAB mode: Short press - move the radio station backward
Long press-move quickly backwards of the radio station
FM mode : Short press — Fine-tune backward, Long press--Backward semi-automatic search
Menu mode: short press -- Move forward

Power On/Off

- ① Carefully extend the telescopic antenna when listening to DAB/FM radio.
- ② Set the power switch on the back of the radio to ON position to turn the radio on, and set the switch to OFF position to turn it off. The radio automatically enters DAB mode after being turned on.

Setting Alarms

You can set 2 alarms by following the steps below:

- ① Press the [ALARM] button (3) to enter the alarm settings menu.
- ② Turn the [ROTARY KNOB] (10) clockwise or counter-clockwise to select alarm 1 or alarm 2 settings.
- ③ Then press the [ROTARY KNOB] to enter and turn the [ROTARY KNOB] [clockwise or counter-clockwise] to select the setting option On/Off/Time/Source/Repeat/Volume.

Alarm: Select On or Off.

Time: Select the time by rotating the [ROTARY KNOB] and press the [ROTARY KNOB] to confirm.

Source: Select FM, DAB or Buzzer.

Repeat: Select Once, Daily, Weekends or Workday.

Volume: Select the volume by turning the [VOLUME] knob clockwise or counter-clockwise, then press the [ROTARY KNOB] to confirm.

After setting all options, press [INFO/MENU] to exit the alarm settings menu.

When the alarm sounds, it gradually increases to the set volume. Turn the [ROTARY KNOB] (10) clockwise or counter-clockwise to adjust the snooze time and activate the snooze function. When the alarm sounds, press the [VOLUME] knob to mute the sound.

System Settings

- ① In operating mode, press and hold the [INFO/MENU] button to enter the main menu. Turn the [ROTARY KNOB] (10) clockwise or counter-clockwise to select the corresponding function and press the [ROTARY KNOB] to enter the function.

DAB Radio

- ① Switch your DAB-48 on, it will automatically enter DAB mode.
- ② When entering DAB mode for the first time, the radio will automatically search for radio stations.
If stations have already been searched, press and hold the [ROTARY KNOB] to activate the automatic station search.
- ③ After searching the stations is completed, turn the [ROTARY KNOB] clockwise or counter-clockwise to cycle through the station list. Press the [ROTARY KNOB] to select a station. Rotate the [VOLUME] knob to adjust the volume; press the [VOLUME] knob to mute the sound and press the [VOLUME] knob again to unmute.
- ④ Press [INFO/MENU] to view information with regard to the current station: radio text, signal strength, program type, program name, channel number/frequency, signal error rate, bit rate, time and date are displayed.
- ⑤ Press and hold the [PRESETS] button to enter the radio presets, then rotate the [ROTARY KNOB] to cycle through the preset stations. Press the [ROTARY KNOB] to save the station under the current preset. To call up a preset station, press the [PRESETS] button and rotate the [ROTARY KNOB] to select the desired preset and press the [ROTARY KNOB] again to select.
- ⑥ **Note:** A total of 40 preset stations can be stored.
- ⑦ Press and hold the [INFO/MENU] button to enter the main menu, then rotate the [ROTARY KNOB] to select the corresponding function and press the [ROTARY KNOB] to enter. The following functions are available:

Note:

Station List: Display station list.

Scan: Automatically search for radio stations.

Manual Tune: Manually search for radio stations.

Prune Invalid: Delete stations that have become invalid.

FM Radio

- ① Switch your DAB-48 on. Press the [MODE] button to enter FM mode.
- ② Press and hold the [ROTARY KNOB] to automatically search and save radio stations. Rotate the [ROTARY KNOB] to select and play the saved radio station.
- ③ Rotate the VOLUME knob to adjust the volume; press the VOLUME knob to mute/unmute the sound.
- ④ Press [INFO/MENU] to view information with regard to the current radio station: radio text, program type, program name, channel information, time and date are displayed.
- ⑤ Press and hold the [PRESETS] button to enter the radio presets, then rotate the [ROTARY KNOB] to cycle through the preset stations. To call up the preset stations, press the [PRESETS] button and rotate the [ROTARY KNOB] to select the desired preset and press the [ROTARY KNOB] again to select. The preset radio station is played. **Note:** A total of 40 stations can be stored.
- ⑥ Press and hold the [INFO/MENU] button to enter the main menu. Rotate the [ROTARY KNOB] to select the corresponding function. Press the [ROTARY KNOB] to enter. The following functions, as above, are available:
- ⑦ **Scan:** Search settings; select all stations or strong stations.

Bluetooth pairing/playback

- ① Switch your DAB-48 on and repeatedly press the [MODE] button until BT mode is selected. You will hear a confirmation tone, indicating that the Bluetooth function has been activated and is in pairing mode. The display shows "Disconnected".
- ② Activate the Bluetooth function on your external device (e.g. smartphone) and search for the Bluetooth device with the name "DAB-48". Select to connect with "DAB-48". After approx. 10 seconds you will hear two confirmation tones and the display shows "Bluetooth Connected" with the name of the connected external device. When turning off or disconnecting the external Bluetooth device, the radio sounds two confirmation tones and the display shows "Disconnected".
- ③ Rotate the [ROTARY KNOB] to skip to the next or previous title, then press the [ROTARY KNOB] to play or pause.
- ④ Rotate the [VOLUME] knob to adjust the volume; press the [VOLUME] knob to mute the sound and press the [VOLUME] knob again to unmute.
- ⑤ Press and hold the [ROTARY KNOB] to disconnect from the external device.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

Instruction

Manufacturer's name or trade mark, commercial registration number and address	Shenzhen Fushigang Technology Co, Ltd 91440300699086484H 301, 401 No 8 Building, Shiguan Industry Park Shangcun Community, Gongming Street Guangming District 518106 Shenzhen, Guangdong Province PEOPLE'S REPUBLIC OF CHINA
Model identifier	AS0601A-0501200EUL
Input voltage	100~240V AC
Input AC frequency	50-60HZ
Output voltage	DC 5V
Output current	1.2A
Output power	6W
Average active efficiency	> 75%
Efficiency at low load (10%)	> 68%
No-load powerconsumption	0.1W

ALL RIGHTS RESERVED, COPYRIGHT DENVER EU



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver.eu declares that the radio equipment type DAB-48 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: and then click the search ICON on topline of website. Write model number: DAB-48. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range:100Hz-18KHz

DAB :174.928~239.2MHZ

Bluetooth :2.4~2.480GHZ

FM :87.5~108MHZ

Max Output Power:35W/3.5W RMS

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

facebook.com/Denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Germany

Denver Germany GmbH Service
Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail

support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: denver@lurfservice.at

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**

E-Mail: denver-service@letmerepair.pl

Godziny pracy: 8 - 18 (poniedziałek - piątek)

If your country is not listed above,
please write an email to
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: support.nl@denver.eu

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 - nave
16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: **+34 960 046 883**

Mail: support.es@denver.eu

Portugal:

Phone: **+35 1255 240 294**

E-Mail: denver.service@satfiel.com



Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

