



CPR-710

www.denver.eu



FR

Cet appareil
est recyclable

À DÉPOSER
EN MAGASIN



ou

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Never use old and new batteries or different types of batteries together. Remove the batteries when you are not using the system for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion. Batteries are not included.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sunlight!
7. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
8. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
9. The direct power cable is used as disconnect device, the disconnect device shall remain readily operable. So, make sure there is space around the power outlet for easy access.
10. Do not use non original accessories together with the product as this can make the product functionality abnormal.

CPR-710 LED Clock Radio w/ Time Projection




1. "⏻ / AUTO SCAN" button
2. "VOLUME - / AL.1" button
3. "VOLUME + / AL.2" button
4. "PRESET CLOCK" button
5. "SLEEP / SNOOZE / DIMMER" button
6. "TUNING - / HOUR" button
7. "TUNING + / MINUTE" button
8. "Projection 180° FLIP" button
9. "Projection ON/OFF" button
10. STANDBY BATTERY COMPARTMENT (back)

- A. Power
- B. Alarm 1 BUZZER
- C. Alarm 1 RADIO
- D. SLEEP
- E. Alarm 2 BUZZER
- F. Alarm 2 RADIO

Use two 'AAA' size batteries to keep accurate time during temporary power interruption.

11. ANTENNA (back)
Extend and reposition the antenna for best radio reception.
12. POWER CABLE (back)
Plug cable into electrical outlet with correct voltage.
13. TIME PROJECTION (back)
Swivel for best viewing angle.

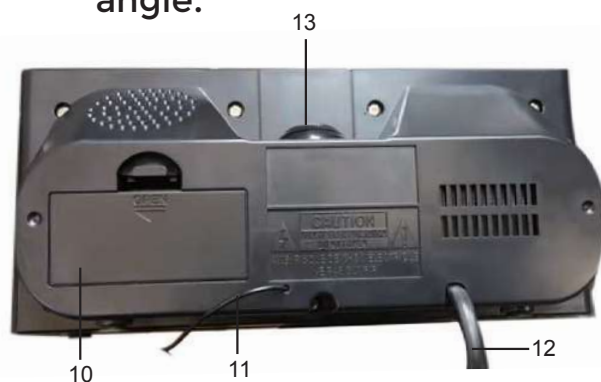

Note: The time and alarm times can only be set when the radio is turned off.

SET TIME

To	Press
Set time	Long press "PRESET CLOCK" (4) until digits flash
Set hour	"TUNING - / HOUR" (6)
Set minute	"TUNING + / MINUTE" (7)
Confirm	"PRESET CLOCK" (4)

SET ALARM

To	Press
Set alarm time	"VOLUME - / AL.1" button (2) for alarm 1 and "VOLUME + / AL.2" button (3) for alarm 2
Set alarm hour	"TUNING - / HOUR" (6)
Set alarm minute	"TUNING + / MINUTE" (7)
Confirm	"VOLUME - / AL.1" button (2) for alarm 1 and "VOLUME + / AL.2" button (3) for alarm 2

ACTIVATE ALARM

To	Press
Alarm with buzzer	"VOLUME - / AL.1" button (2) for alarm 1 and "VOLUME + / AL.2" button (3) for alarm 2
Alarm with radio	"VOLUME - / AL.1" button (2) for alarm 1 and "VOLUME + / AL.2" button (3) for alarm 2
Deactivate alarm	"VOLUME - / AL.1" button (2) for alarm 1 and "VOLUME + / AL.2" button (3) for alarm 2
Turn off alarm sound / radio	"  / AUTO SCAN" (1)
Snooze	"SLEEP / SNOOZE / DIMMER" (5)

DISPLAY

To	Press
Change display brightness	Long press "SLEEP / SNOOZE / DIMMER" (5) to change display brightness between high, middle or off.
Project time	"Projection ON/OFF" button (9) to turn on and off. Press "Projection 180° FLIP" button (8) to rotate time.

General Operations

To	Press
Turn on / off	"  / AUTO SCAN" (1)
Automatic tune	Long press "TUNING - / HOUR" (6) or "TUNING + / MINUTE" (7)
Manual tune	"TUNING - / HOUR" (6) or "TUNING + / MINUTE" (7) repeatedly
Auto pre-set stations	Press and hold down "  / AUTO SCAN" (1) when radio is on.
Manual pre-set stations	After select station, long press "PRESET CLOCK" (4). Press "TUNING - / HOUR" (6) or "TUNING + / MINUTE" (7) to select station number (1-20). Press "PRESET CLOCK" (4) to confirm.
Recall pre-set station	"PRESET CLOCK" (4). repeatedly
Sleep mode	"SLEEP / SNOOZE / DIMMER" (5) (10 - 90 minutes)
Chang volume	"VOLUME - / AL.1" button (2) or "VOLUME + / AL.2" button (3)




Please notice - All products are subject to change without any notice.
We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



www.denver.eu

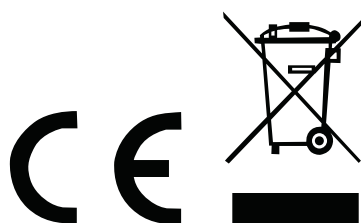

Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type CPR-710 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: CPR-710. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range: FM 87.5 - 108MHz

Max Output Power: 0.5W

DENVER A/S

Omega 5A, Soefte

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Contact

Nordics

Headquarter

Denver A/S
Omega 5A, Soefte
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 - nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail

support.de@denver.eu

Fairfixx GmbH

Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: **+49 851 379 369 69**

E-Mail: **denver@fairfixx.de**

Austria

Lurf Premium Service GmbH

Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: **denver@lurfservice.at**

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soefte
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu



Version 1.1