



TSP-307  
denver.eu

2025



FR

Cet appareil et  
ses accessoires  
sont recyclables

À DÉPOSER  
EN MAGASIN



À DÉPOSER  
EN DÉCHÈTÈRIE



OU

Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

## INSTRUCTION MANUAL

### Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of the reach of children.
2. Warning: This product includes are chargeable lithium ion battery.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degrees Celsius to 40 degrees Celsius. Environments under and above this temperature might affect functionality.
5. Never open the product. Do not touch the inside electronics, or you may get an electric shock. Repair or service are only to be performed by qualified personnel.
6. Do not expose to heat, water, dust (dusty environment), moisture, direct sunlight!
7. Please protect your ears against loud volumes. Loud volumes can damage your ears and lead to hearing loss.
8. Bluetooth wireless technology can only operate within a range of about 10m (30 ft). The maximum communication distance may vary depending on the presence of obstacles(people,metal objects, walls, etc.) or the electromagnetic environment.

9. Microwaves emitted by a Bluetooth device may affect the operation of electronic medical devices.
10. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop using it immediately.
11. Only charge with the supplied USB cable.
12. This product doesn't support harmonized fast charging.
13. Do not use non original accessories together with the product as this can make the product functionality abnormal.
14. Do not block the ventilation openings. The product needs them to disperse heat.

Denver A/s reserve the rights for print errors  
Denver A/s cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. If you detect any inaccuracies or omissions, please inform us at the address on the back cover.

**PLEASE READ ALL INSTRUCTIONS  
CAREFULLY AND RETAIN FOR FUTURE USE**

 
## PACKAGE CONTENTS:

- . Speaker
- . Wired microphone
- . Charging Cable
- . Remote
- . Instruction Manual

## TECHNICAL SPECIFICATIONS

- . Speaker: 12W
- . Working Distance: 10 Meters
- . Battery Lithium battery: 3.7V, 2400mAh
- . Rated Voltage: DC 5V/1000MA
- . Charging time: 4 -5 hours
- . Play time: up to 3 hours
- . Power consumption (in off mode): 0.5W
- . Power consumption (standby in BT/SD/USB/AUX): 0.8W
- . Function: BT/AUX/USB/SD card/TWS/Mic in

## INSTRUCTIONS FOR USE SPEAKER

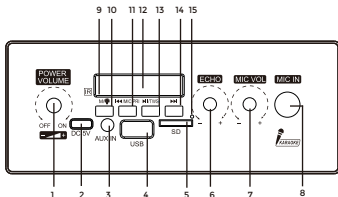

- 1.Power On/Off, Volume up/down
- 2.Type C charging port
- 3.AUX in
- 4.USB
- 5.SD card slot
- 6.Echo for Mic
- 7.Mic volume
- 8.Mic in
- 9.Remote receiver
- 10.Mode/Light switch
- 11.Previous music/ Mic priority
- 12.Led display
- 13.Pause/Play/TWS
- 14.Next music/Record
- 15.Charging indicator light

## CHARGING SPEAKER

1. Before first time to use, please fully charge the speaker!
2. The speaker should be powered by an adaptor 5V/1A (not included). Please use the charging cable provided, plug the USB-C end into the charging port on speaker, and the USB-A end the adaptor (not included).
3. While charging the speaker, the LED indicator will stay in red. After fully charged, the indicator will be off, please remove the charge cable after fully charged.

## **POWER ON/OFF**

Turn right the knob (1) to turn on the speaker, and turn left the knob (1) to the end to turn off the speaker. You have to turn it over the click to turn it on/off.

## **POWER MANAGEMENT**

1. In AUX mode, if you pause music though the phone, the speaker will not automatically turn off . If you pause music though the speaker unit and there isn't any operation for 20 minutes, the speaker will automatically turn off.

2. In BT mode, if there isn't any message, calls, and APP notification come to the phone, and no any operation for 20 minutes, the speaker will automatically turn off. If there is any message, calls, APP notification and operation, the time to automatically turn off will be re-timed.

3. In USB/SD Card mode, if there isn't any operation for 20 minutes, the speaker will automatically turn off

## **BLUETOOTH CONNECTION**

Turn on the speaker, it will enter BT pairing mode automatically, you will hear a voice prompt. Turn on the Bluetooth connection on your device, scan/search and select "TSP-307". Once paired, speaker will voice prompt, and you can start playing music.

## **MUSIC CONTROL**

While playing music, turn right the knob (1) to increase volume, and turn left the knob (1) to decrease volume.

Short press button (11) to previous music, and short press button (14) to next music.

Short press button (13) to play or pause music.

## **MODE**

Short press button (10) to switch modes among BT/AUX/USB/SD card.

## **LED LIGHT ON/OFF**

Long press button (10) to switch the light.

 
## **TWS CONNECTION**

The speaker supports TWS function, which means you can pair two same speakers to get a stereo function. To do this, turn on both speakers, but don't pair them with any BT devices. Long press button (13) on one of the speakers, once the speaker is connected with the other one, there will be a prompt. Now the speakers will behave as one Bluetooth unit, and you can play music through two speakers.

## MICROPHONE FUNCTION

1. Plug the microphone in the Mic port, and you can start using the mic function
2. When use microphone, turn right/left knob (6) to increase/decrease MIC echo.
3. When use microphone, turn right/left knob (7) to increase/decrease MIC volume.
4. MIC priority function means when sing or talk though microphone, it will make the background music with lower volume. Long press button (11) to turn on the MIC priority function. Long press it again to turn off the function.
5. Record function: When in USB/SD Card mode, long press button (14) to start record function, long press it again to play the audio that is recorded.

## INSTRUCTIONS FOR USE REMOTE

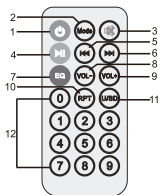

- 1.ON/OFF
- 2.Switch Mode USB/SD Card /BT/AUX
- 3.Mute the speaker
- 4.Pause/Play
- 5.Previous music
- 6.Next music
- 7.EQ Modes
- 8.Speaker volume down
- 9.Speaker volume up
- 10.Repeat (Repeat single or entire track in USB/SD card mode)
- 11.Switch Mode USB/SD card
- 12.Number Keys: used to input the track number when using the USB/SD Card. For example if press 9, the speaker will go to track number 9 on USB/TF Card. If press 1 and 9, the speaker will go to track 19.

Remote control includes CR-2025 cell battery

Please note: when using the remote control, ensure that the remote control faces the receiver of the speaker and ensure accessibility.

 
 
Please note - All products are subject to change without any notice.

We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED,  
COPYRIGHT DENVER A/S



Denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed-out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility.

In this manner you make sure that the batteries are recycled in accordance with the legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type TSP-307 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [denver.eu](http://denver.eu) and then click the search ICON on topline of website. Write model number: TSP-307. Now enter product page, and RED directive is found under downloads/other downloads.  
Operating Frequency Range: 70Hz-18Khz  
Max Output Power: 12W  
Bluetooth Frequency: 2402MHZ-2480MHZ

DENVER A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark  
[www.facebook.com/denver.eu](https://www.facebook.com/denver.eu)

# Contact

**Main contact point: [contact.hq@denver.eu](mailto:contact.hq@denver.eu)**

## Nordics

Headquarter  
Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

Phone: **+45 86 22 61 00**  
(Push "1" for support)

E-Mail  
For technical questions, please write to:  
**[support.hq@denver.eu](mailto:support.hq@denver.eu)**

For all other questions please write to:  
**[contact.hq@denver.eu](mailto:contact.hq@denver.eu)**

---

## Benelux

**DENVER BENELUX B.V.**  
Barwoutswaarder 13C+D  
3449 HE Woerden  
The Netherlands

Phone: **0900-3437623**  
E-Mail: **[support.nl@denver.eu](mailto:support.nl@denver.eu)**

---

## Spain/Portugal

**DENVER SPAIN S.A**  
Ronda Augustes y Louis Lumiere, n° 23 - nave  
16  
Parque Tecnológico  
46980 PATERNA  
Valencia (Spain)

**Spain**  
Phone: **+34 960 046 883**  
Mail: **[support.es@denver.eu](mailto:support.es@denver.eu)**

**Portugal:**  
Phone: **+35 1255 240 294**  
E-Mail: **[denver.service@satfiel.com](mailto:denver.service@satfiel.com)**

## Germany

**Denver Germany GmbH Service**  
Service Center  
Max-Emanuel-Str. 4  
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail  
**[support.de@denver.eu](mailto:support.de@denver.eu)**

Monday - Thursday 09:00 - 16:30  
Friday 09:00 - 14:00

---

## Austria

**Lurf Premium Service GmbH**  
Deutschstrasse 1  
1230 Wien

Phone: **+43 1 904 3085**  
E-Mail: **[denver@lurfservice.at](mailto:denver@lurfservice.at)**

---

## Poland

**LetMeRepair Poland sp. z o.o.**

ul. Częstochowska 140  
62-800 Kalisz

Phone: **62 75 38 092**  
E-Mail: **[denver-service@letmerepair.pl](mailto:denver-service@letmerepair.pl)**

Godziny pracy: 8 - 18 (poniedziałek - piątek)

---

If your country is not listed above,  
please write an email to  
**[contact.hq@denver.eu](mailto:contact.hq@denver.eu)**



Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

[denver.eu](http://denver.eu)  
[facebook.com/denver.eu](https://facebook.com/denver.eu)

