 


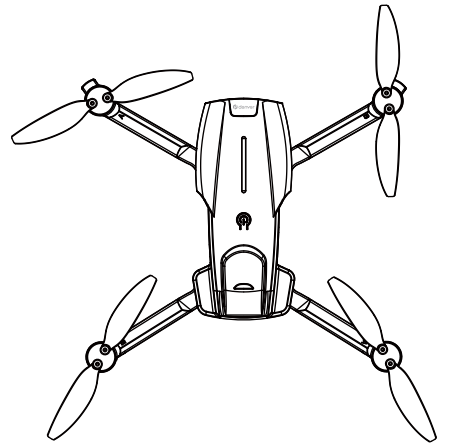

DCW-3520
denver.eu

15/09/2025

 


FR
Cet appareil, ses
cordons, ses accessoires
et ses batteries sont
recyclables

À DÉPOSER
EN MAGASIN
OU
À DÉPOSER
EN DÉCHÈTERIE
Points de collecte sur www.quefaire-demarches.fr
Privilégiez la réparation ou le don de votre appareil !

Denver DCW-3520

denver.eu
www.facebook.com/denver.eu
Please read this instruction manual carefully before using the product

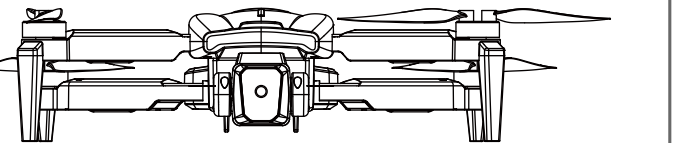

ENGLISH

Notice:

1. Instructions

Please read the user handbook carefully and then keep it in a safe place for future consultation and maintenance.

1.1 Important Notice

(1) This product is not a toy, it's a piece of complicated equipment which integrated with professional knowledge by mechanic, electric, air mechanics, high-frequency transmitter and so on, so it should be installed correctly and adjusted to avoid any accidents.

The owner must always operate in a safe manner, if improper operation that caused human injured or property damage, then we DENVER A/S accept no liability for any safety duties from operation. As we have no control over the way they maintained, used and operated.

(2) This product is not suitable for users under 14 years of age.

(3) The use of the drone may be prohibited in some areas like train stations, airports, aircrafts, inhabited areas etc. You should check with the authorities whether the use of the drone is permitted in some public or private areas. Always use the drone bearing in mind not to breach people's privacy. We exclude liability for any wrong use of the drone.

(4) We DENVER accept no liability for any safety duties or fines arising from operation, usage or miscontrol after the sale of products. Warranty does not cover if drone crashes and get damaged.

1.2 Safety Precautions

Keep away from crowd when flying, since drone flight is a high-risk hobby. Misassembled or broken main frame or defective electronic equipment or unskilled operation may cause accidents of machine damaged or injured. Please pay special attention to safety operation.

(1) Keep away from people and obstacles

"The flying speed and status of the drone is uncertain, so it may cause potential danger."

When choosing a flying site should stay clear of buildings, trees and power lines. AVOID flying in or near crowded areas. Meanwhile avoid flying in rain, storms, thunder and lightening to protect machinery and parts out of damage.

(2) Keep away from humid environments

Inside of drone is made up of precise electronic components. Stay away from humidity or water vapor to protect machinery and parts.

(3) Safety operation

Please fly your drone according to your physical status and flight skill. Fatigue, listlessness and mis-operation will increase possibilities of accidental hazard.

(4) Keep away from rotating blades

Keep your face and body as well as all spectators away from the rotating blades. The spinning blades of a model of this type can cause serious injury.

(5) We recommend flying the drone below 10 meters of height.

(6) Keep away from heat

A drone is made up of metal, fiber, plastic, electronic components, etc. Keep it away from heat and sunshine to avoid distortion, and damage.

1.3 Check List Before First Flight

(1) Flying field should be in an open space and we suggest at least 5M length *5M wide *3M height.

(2) Make sure the receiver and transmitter is fully charged.

 
(3) Please strictly obey the order of turn-on, turn-off before operation. When starting your flight, first turn on the transmitter, and connect the battery with drone last; When finishing your flight, please disconnect the battery from your drone first, turn off transmitter last.

An upset in the order of connection may cause your drone loose control to threaten yourself and others safely. Please follow a correct habit of turn-on and turn-off.

(4) Make sure the connection is solid between battery or motor. The ongoing vibration may cause bad connection of power terminal and make the drone uncontrollable.

Battery Installation & Charging

Controller




To install batteries: Open the cover of battery case, insert 3 x 1.5V AA batteries, according to indicated polarity (batteries not included).
Battery installation should be done under adult supervision only!
Do not mix old and new batteries.
Do not mix different types of batteries.

Charging

Connect one side of the USB connector with the battery, and the other side into any USB port of computer or a power adapter (not included).

Note: The battery does NOT support fast charging, and fast charging maybe cause the USB cable and battery melted or burnt.

 Please charge it only with power input DC 5V/1A, or DC 5V/2A maximum !




Drone

Fold the drone for outdoor carrying: fold the back arms (1) first, then fold the front arms (2).
Unfold the drone before flying: unfold the front arms (2) first, then unfold the back arms (1).


Replacing the damaged blades:

Your set will come with 4 spare rotors, two type A (A1=A2) and two type B (B1=B2).





 
You will see the "A" and "B" word on the canopy, then put the rotor on the motor accordingly

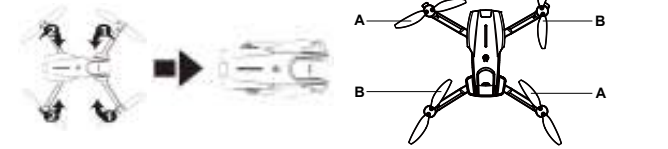

Remote Control

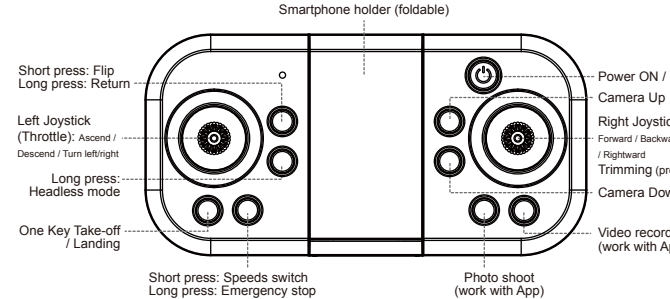 

Standard Operation Steps

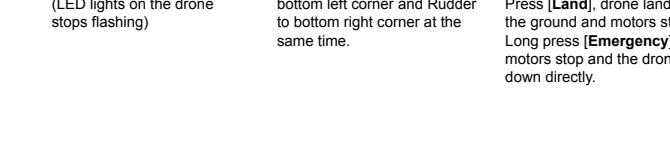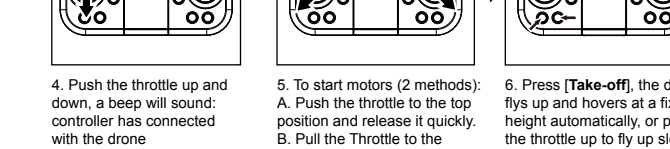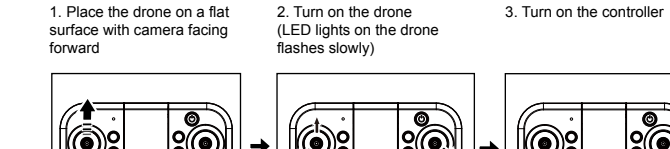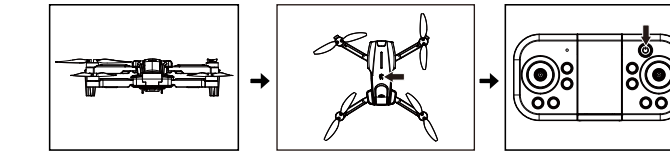     


Calibration Reset (Very important!)

Before first flying, Calibration Reset is necessary to be done, to make sure the drone will fly stably: Pull the Throttle to Bottom Right corner and Rudder to Bottom Left corner at the same time for 3 secs, the LED lights on the drone flashes quickly, then let go the throttle and rudder.

The LED lights on the drone stops flashing and keeps on.

 
Calibration Reset complete.



Headless Mode

Start / Quit Headless Mode

 Press and hold the button on controller (as picture) you will hear beep sounds, then you get into headless mode and lights flash on the drone. Press and hold it again to quit. At the moment when you start headless mode, the direction that controller is pointing to will be fixed as the directions of drone. No matter how you rotate the drone, the front direction won't change accordingly.

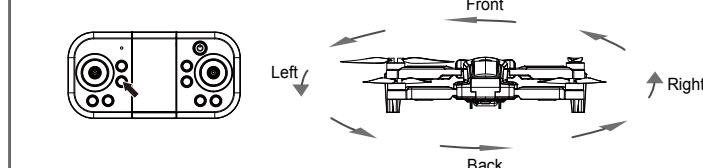


One Key Return

Press and hold this button (as picture), and you will activate One Key Return and the drone will now attempt to fly back towards its starting direction.

If you want to deactivate this mode, then push the right joystick (Rudder) to any direction.

 Note: The drone will not land automatically, you still need to control the height of the drone when using the one key return flying mode.



WiFi Camera

1. APP DOWNLOAD & INSTALLATION

1.1 Search [WiFi UAV] from iOS App Store or Android Google Play

1.2 Download and install it onto your smart phone or tablet

2. HOW TO CONNECT DRONE WITH APP

2.1 Power on the drone

2.2 Enter the Setting of your smart phone/tablet, and turn on WiFi

2.3 Find a WiFi hotspot [FLOW_xxxxx], click to connect it until "connected".

 
2.4 Start the App [WiFi UAV], click the icon [START] to enter the control interface. You'll see the real-time video from front camera, or switch to the bottom camera.

2.5 Now users can control the drone with the icons in the App. For detailed control guide, please click the icon [SETTING] to read carefully.

2.6 Photos and Video files will be stored onto smart phone/tablet automatically.



Flips and rolls

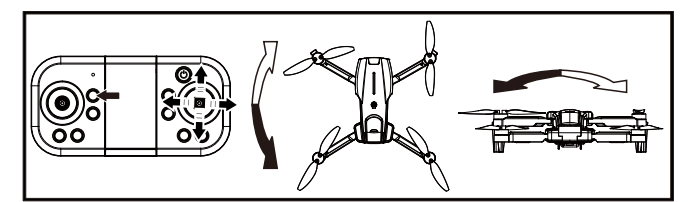


After you have the basics of flying, you're ready to learn flip and roll your drone.

To perform a flip or roll, press the **Flip** button, make sure the drone is at least 3 meters off the ground and quickly push the Rudder, in either direction to make the drone flip or roll.

Once the manoeuvre is completed, steady the drone.

 Main Accessories



Please notice - All products are subject to change without any notice.
We take reservations for errors and omissions in the manual.
ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type DENVER DCW-3520 is in compliance with Directive 2014/53/EU. The full text of the RED declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: dcw-3520. Now enter product page, and RED directive is found under downloads/other downloads.

Information on standby/off mode power consumption and power management for products compliant with Commission Regulation (EU) 2023/826 can be found at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: dcw-3520 and enter the page.
Operating Frequency Range: 2440MHz - 2475MHz
Max Output Power: 40W

DENVER A/S
Omega 5A, Soefften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

Warning!
- Lithium battery inside !
- Do not try to open the device!
- Do not expose to heat, water, moisture or direct sunlight!

Denver A/S reserve the rights for print errors
Denver A/S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. If you detect any inaccuracies or omissions, please inform us at the address on the back cover.

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter
Denver A/S
Omega 5A, Soefften
DK-8382 Hinnerup
Denmark

Phone: +45 86 22 61 00
(Push "1" for support)

E-Mail: support.de@denver.eu

E-Mail: For technical questions, please write to: support.hq@denver.eu

For all other questions please write to: contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: +43 1 904 3085
E-Mail: denver@lurfservice.at

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: 62 75 38 092
E-Mail: denver-service@letmeprepair.pl

Godzinny pracy: 8 - 18 (poniedziałek - piątek)

If your country is not listed above, please write an email to contact.hq@denver.eu

Portugal:

Phone: +35 1255 240 294
E-Mail: denver.service@satfiel.com

Germany

Denver Germany GmbH Service
Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: +49 851 379 369 40

E-Mail: support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschrastasse 1
1230 Wien

Phone: +43 1 904 3085
E-Mail: denver@lurfservice.at

Spain/Portugal

DENVER SPAIN S.A.
Ronda Augustes y Louis Lumiere, n° 23 - nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Phone: 62 75 38 092
E-Mail: denver-service@letmeprepair.pl

Godzinny pracy: 8 - 18 (poniedziałek - piątek)

If your country is not listed above, please write an email to contact.hq@denver.eu



Denver A/S
Omega 5A, Soefften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

