



Convactor Heater



SCH-2105

denver.eu

01/2023



FR

Cet appareil et
ses batteries sont
recyclables

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



OU

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

This product is only suitable for well insulated spaces or occasional use.

Instruction Manual

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.



WARNING

- This product is not a toy. Keep it out of reach of children.
- Keep product out of the reach of children and pets to avoid chewing and swallowing.
- In order to avoid overheating, do not cover the heater.
- Do not use the product unless the feet are mounted correctly.
- Do not bump or drop the product.
- Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
- The power cord on this heater must not be replaced by the user. If the cord is damaged or requires replacement, contact qualified personnel only.
- Do not expose to water and moisture.
- The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
- Remove the packaging and make sure that the heater is intact. If in doubt, do not use it and contact the store you purchased it. Packaging materials (plastic bags, polystyrene, staples etc.) must be kept out of the reach of children as they could be hazardous.

- Before connecting the heater, check that the heater rating corresponds to the mains rating.
- This heater must only be used for the purpose for which it has been manufactured, i.e., for additional electrical heating in rooms. Any other use is considered improper and therefore dangerous. The manufacturer is not responsible for any damage caused by improper, incorrect, or unreasonable use.
- If the heater is faulty and/or operating incorrectly, switch it off without tampering with it. If the above is disregarded, the safety of the heater may be compromised.
- Switch off the heater and remove the plug from the electrical outlet when not in use. Do not unplug the product by pulling on the cable. Always grasp the plug and pull.
- Allow the product to cool down.
- The use of any electrical heater calls for the awareness of basic rules, such as:
 - Do not use the heater near sources of water such as baths, showers, or swimming pools
 - Do not touch the heater with wet or damp hands or feet
 - Do not leave the heater exposed to atmospheric agents
- Do not use the heater in the presence of potentially flammable or explosive liquids or gases
- In order to avoid overheating, it is advisable to unwind the entire length of the power cord.
- Do not leave the heater plugged in when not required. Unplug the heater from the mains after having switched it off when not in use.

 
- Do not obstruct the ventilation or heat dispersion openings.
- Avoid hot contact, checking that the cord is not placed in front of the hot air outlet grille.
- Do not use near bathtubs, showers, or basins (minimum distance one meter).
- Use in an upright position and on a stable level surface.
- Keep the suction grille clean.
- Do not use the heater immediately below a fixed power outlet and power cord must not touch hot surfaces.

CAUTION


- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Switch of the product and disconnect from power before cleaning and maintenance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the heater and its cord out of reach for the children less than 8 years.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the heater if it has been placed or installed in its intended normal operating position, and they have been given supervision or instruction concerning use of the heater in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the heater or perform user maintenance.

FOOT ASSEMBLY

Before using the heater, the feet (supplied separately in the carton) must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings.

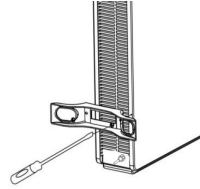

 
Note: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

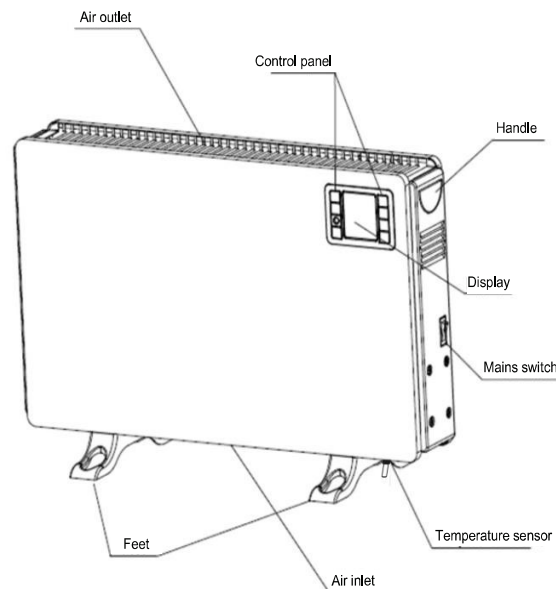

Operation panel function introduction



- | | | |
|---|-----------------------------|---|
| 1. Selected heating level display | 6. Increase temperature | 12. On/Off button |
| 2. "Fan" symbol | 7. Reduce temperature | 13. Infrared receiver for remote control |
| 3. "Frost protection" symbol | 8. Timer button | 14. Wi-Fi button |
| 4. Selected unit of measurement display | 9. Running time display | 15. Button for selecting the heat setting |
| 5. Fan button | 10. Set temperature display | 16. Wi-Fi indicator lamp |
| 11. Measured temperature display | | |

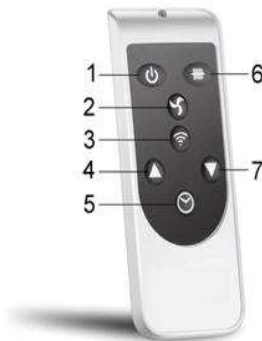 

- | | |
|-------------------------|--|
| 1. On/Off button | 5. Timer button |
| 2. Fan button | 6. Button for selecting the heat setting |
| 3. Wi-Fi button | 7. Reduce temperature |
| 4. Increase temperature | |

Key function introduction

POWER function

Insert the plug in a suitable power socket. After turning on the main switch (on the right side), the heater will emit a "click" sound. The screen displays the current room temperature and turns on the panel control switch.

Press the on/off and then set the temperature with the increase/decrease temperature buttons.

Press the button for selecting the heat settings. You can select between four modes

750W/1250W/2000W/Anti-frost.

Anti-frost mode: In the standby mode, if the room temperature is lower than 5°C, then the heater automatically enters the high-grade (2000W) heating mode. When the room temperature reaches 9°C, the heating is turned off to standby, followed by cycling.

Timer and temperature setting

Timer

Press the timer button, with each press the time is increased by 1 hour. When the desire time is reached wait 5 seconds and the timer will start.

Temperature

The temperature can be set when the heater is in stand-by or heating. When the room temperature reaches the set level, the heater stops to work; When room temperature is 1 degree over the set temperature, the heater also will stop to work. The heater will begin operating again only when temperature decreases 1 degree under set temperature. The temperature range is 5°C-37°C.

Fan

You can turn on the fan and turn off the fan by pressing the fan button.

Operating sound

The heater emits a beep upon each operation setting.

Memory

The heater can hold the last temperature setting in its memory. This temperature will be shown at each start-up. If the power settings were different, start-up reset will go to those set as default.

CONNECTING THE HEATER TO WIFI

DOWNLOAD THE APP TO YOUR PHONE

Download the "TUYA SMART" app, from your chosen app store, using the QR codes below, or by searching for the app in your chosen store.



IOS



Andriod

MODE FOR SETUP

The heater has one setup mode, AP (Access Point). The AP connection uses a direct local Wi-Fi connection between your phone and the heater to upload the network details. When first turned on using the main switch on the right side of the unit, the Wi-Fi will be turned off. To turn on the Wi-Fi, press and hold the Wi-Fi button for 3 seconds. The Wi-Fi indicator will flash quickly to indicate the unit is in AP connection mode.

Please ensure your device is in the correct Wi-Fi connection mode for the connection type you are attempting, the flashing Wi-Fi indicator on your heater will indicate this.

Connection Type Frequency of Flashes

 
AP (Access Point) Flashes once per second

TURNING THE WIFI OFF

To turn the Wi-Fi off, the heater can be turned off using the main switch on the right side or press and hold the Wi-Fi button for 5 seconds. When the unit is turned back on it will start with the Wi-Fi turned off, until reactivated following the steps above.


CONNECTING USING APP MODE ALTERNATIVE METHOD

Before initiating the connection, make sure the unit is in standby mode (Power switch ON, but unit turned off), with the Wi-Fi Light Indicator flashing once per second. Also ensure your phone is connected to the Wi-Fi network. (We advise turning mobile data off during setup).

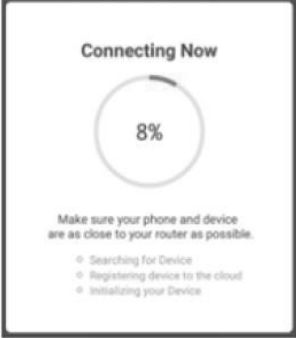1. Open app and press "+" to add device, or use the add device button 	2. Select the type of device as "Heater" within the Home Appliance tab. 	3. Press on the AP mode button in the top right of the screen. 
4. Ensure the Ambient Light indicator on the heater is slowly flashing (once per second), then press on the orange button at the bottom of the screen to confirm 	5. Enter your WiFi password and press confirm. 	6. This will then transfer the settings to the heater. Wait for this to complete. If this fails, retry. If still unsuccessful please review the troubleshooting section for further help. 
This will then transfer the settings to the heater. Once the connection process has completed, go back to the network settings on your phone to ensure your phone has reconnected to your WiFi router.		


CONTROLLING YOUR HEATER THROUGH THE APP THE HOME SCREEN

 Each device has its own entry on the home screen to allow the user to either quickly turn the unit on or off, or to enter the device screen to make other changes.

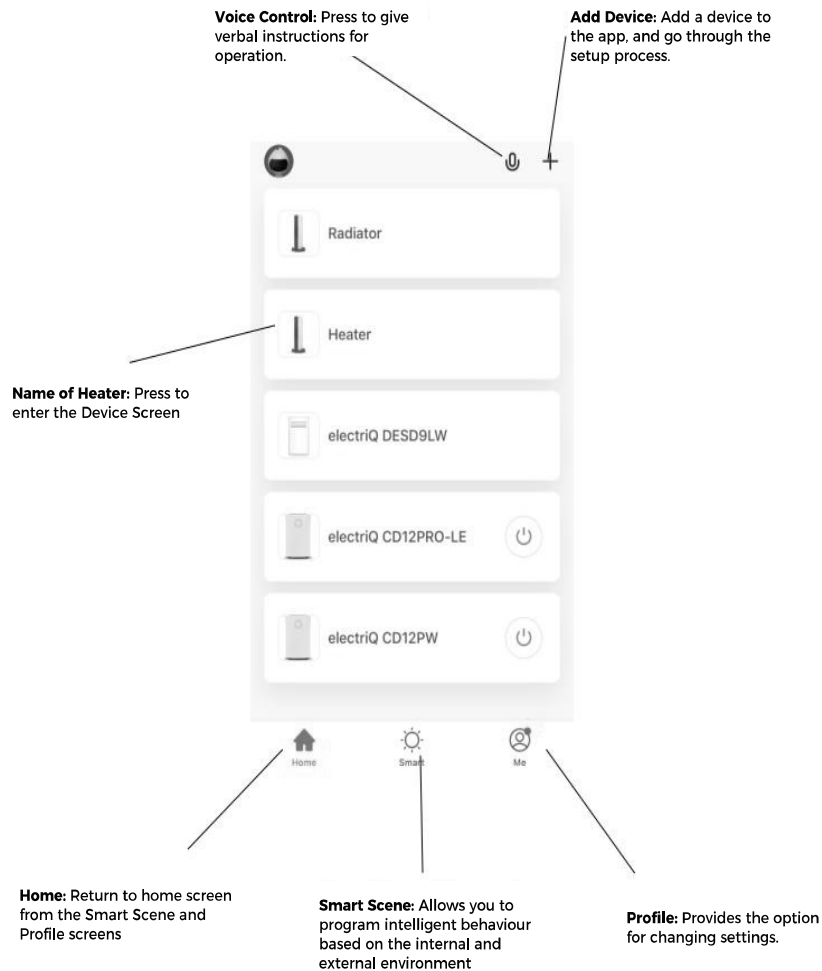

DEVICE SCREEN

 The device screen is the main control screen for the heater, providing access to the controls to amend the functions and settings.

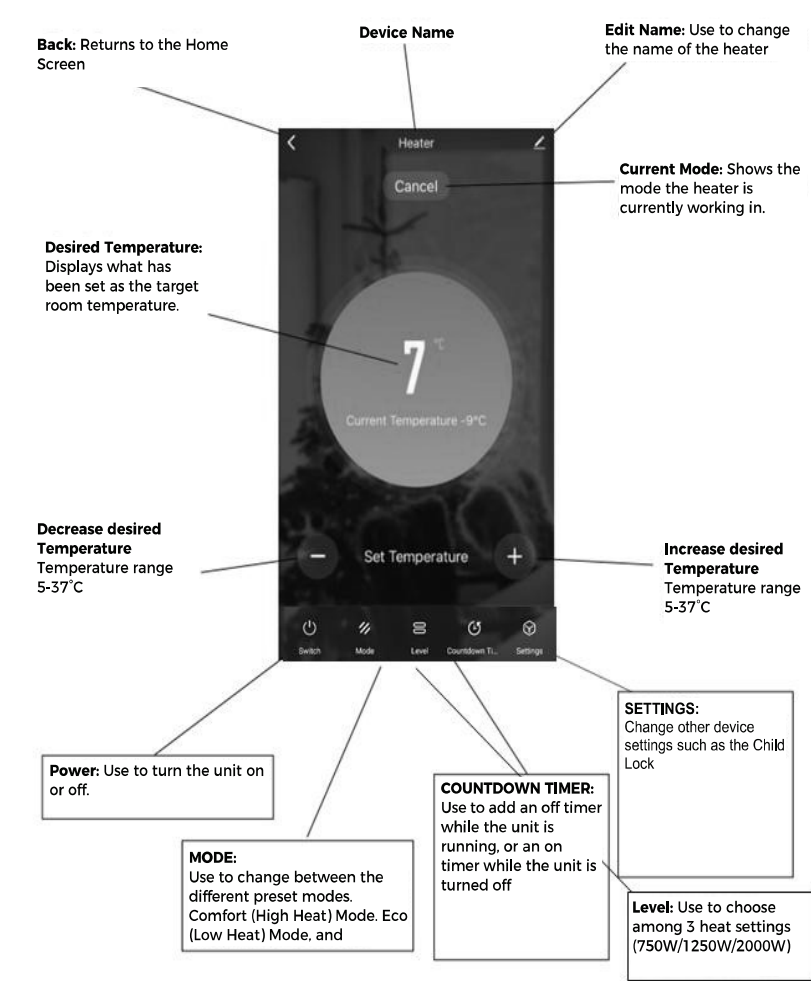

NOTE: Due to continuous development of the app, the layout and available features may be subject to change.

CONNECTION TROUBLESHOOTING

1. Check whether the device is powered on and is in the correct Wi-Fi connection mode, if not please refer to the CHANGING BETWEEN CONNECTION MODES section.
2. Ensure the Wi-Fi password has been entered into the app correctly (Case sensitive)
3. Check that the phone is connected to the Wi-Fi you are connecting the device to.
4. Ensure the network you are connecting it to is 2.4Ghz (5Ghz Wi-Fi networks are not supported), and that there is a strong Wi-Fi signal to the item.
5. If your router is dual band, ensure that the 2.4Ghz network has a different network name (SSID). Further advice on changing router settings will be available from your Internet service provider / Router manufacturer.
6. Check the settings on the router. Encryption should be WPA2-PSK, and authorization type should be set to AES

TECHNICAL DATA

Model	SCH-2105
RATED VOLTAGE	AC220-240V/50-60Hz
POWER	1800-2000W

MAINTENANCE

Before carrying out routine cleaning, switch off the product and disconnect main power. Use a soft, damp cloth only and do not use abrasive substances.

Note: Do not submerge any part of the product in the water.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type SCH-2105 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: SCH-2105 Now enter product page, and RED directive is found under downloads/other downloads.

**Operating Frequency Range: Wi-Fi 2.412-2.472GHz
Max Output Power: 1800-2000W**

**DENVER A/S
Omega 5A, Soefte
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu**

Warning!

- Lithium battery inside!**
- Do not try to open the product!**
- Do not expose to heat, water, moisture or direct sunlight!**

Contact

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustes y Louis Lumiere, n° 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain
Phone: +34 960 046 883
Mail: **support.es@denver.eu**

Portugal:
Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
support.de@denver.eu

Fairfixx GmbH
Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: +49 851 379 369 69
E-Mail: denver@fairfixx.de

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu



Version 1.1