



MFR-404

05/25/2025



 
Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety instructions


1. To protect against electrical shock, never immerse power cords, cables or plugs in water or other liquids.
2. This unit only works on 220-240V AC or 12V DC.
3. Unplug the unit from outlet when not in use and before cleaning. Allow to cool prior to cleaning the product.
4. When not in use for extended periods, store the device in a well-ventilated area.
5. Do not operate any appliance with a damaged cord or plug or after any malfunction or damage to the unit.
6. If any of the SUPPLIED CORDS are damaged, they must be replaced by the manufacturer, its service agent or a similarly qualified person, in order to avoid a hazard.
7. Do not let the cord hang over the edge of the table counter or come into contact with a hot surface.
8. Always attach plug to the unit first, then plug power cord into the wall outlet or DC unit. To disconnect, first turn unit switch to the OFF position, then remove plug from the outlet.
9. When plugging in the unit, make sure the power cord is inserted tightly into the outlet. A loose socket can cause damage or fire.
10. The use of extension cords with this product is not recommended.
11. Keep the device away from fire or other flammable materials.
12. Do not operate under direct sunlight.
13. When alternating between WARM and COOL settings, turn the switch to the OFF position first, wait two minutes, then turn the switch to the desired setting.
14. If using in a car, disconnect the plug from the cigarette lighter when not in use or when the car is not running.
15. Allow adequate ventilation on all sides of the unit when in operation. Keep the fan free from any obstruction.
16. Do not store meat, poultry, fish, dairy products, or other items that may spoil within the device for more than an hour.

Included in the box:


1. Mini Refrigerator
2. Small Shelf
3. DC Car adaptor
4. Europlug AC power cable
5. User Guide

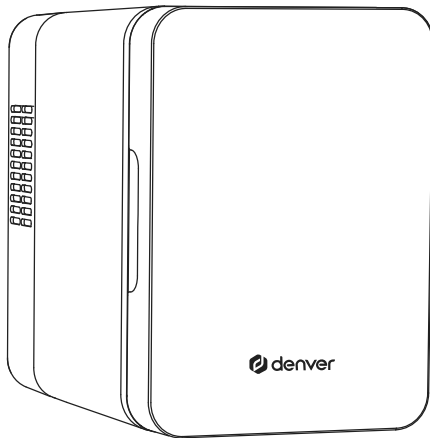


①

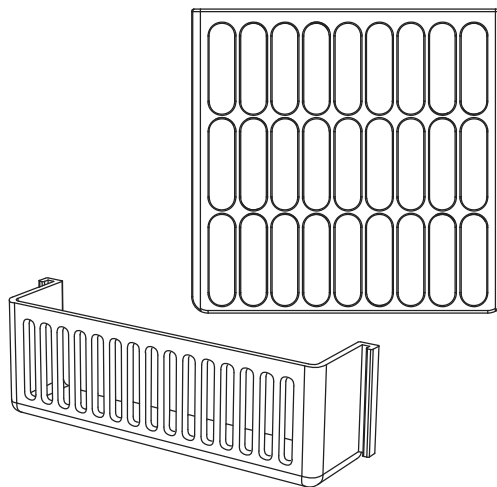 


②

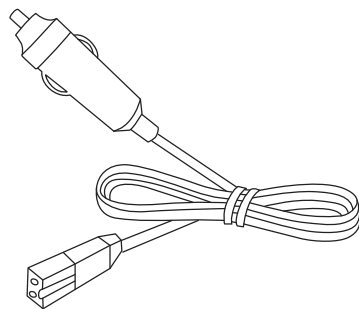 

③

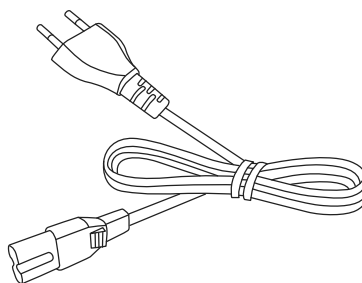 

④

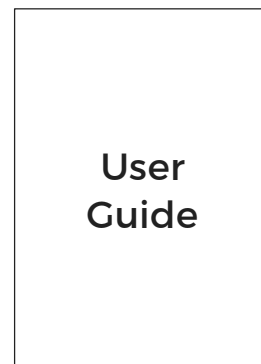 

⑤

User instructions

Household Power Connection:

Plug the Europlug end of the included AC power cable into a power socket, and the other end into the AC power port.

DC adaptor connection:

1. Plug the Car adaptor into the car and the DC end into the DC power port.
2. Cooling function: Slide the switch to the top position to start cooling, and the green indicator light will illuminate. The refrigerator will cool down to 6 Celsius (Based on room temperature on 20 Celsius or below)
3. Heating function: Slide the switch to the bottom position to start heating, and the red indicator light will illuminate. The refrigerator will now go up to 55 Celsius after a while.

Good to know

- Stopping Cooling/Stopping Heating: Slide the switch to the middle position marked with "OFF".
- Allow 1-2 hours to achieve coldest temperature based on the ambient room temperature.
- The WARM setting is not adjustable and is not intended to “heat up” contents.

Maintenance

1. Always keep the electrical wires and cigarette lighter sockets clean.
2. Contaminants such as ash particles in sockets or plugs may affect performance.
3. When cleaning, use a warm damp cloth or sponge to wipe the interior.
4. Do not use harsh or abrasive cleaners.
5. Using a mild soap is sufficient, but if stains or odors persist, you can add household bleach or baking soda to the cleaning solution.
6. Keep the lid open for a few hours after cleaning.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S
Omega 5A, Soefte
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter
Denver A/S
Omega 5A, Soefte
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**
E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustes y Louis Lumiere, n° 23 - nave
16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain
Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:
Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service
Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**
E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 - 18 (poniedziałek - piątek)

If your country is not listed above,
please write an email to
contact.hq@denver.eu



Denver A/S
Omega 5A, Soefte
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

