


DAB+ FM RADIO

DAB-30

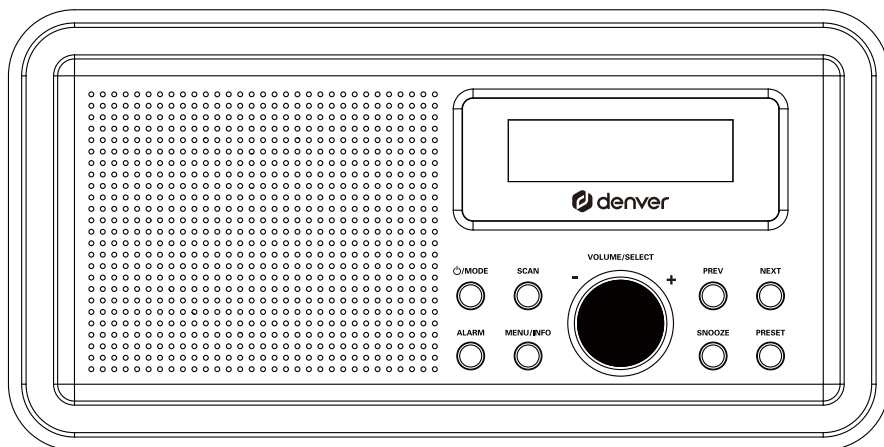

INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.


Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

- 1.This product is not a toy. Keep it out of reach of children.
- 2.Keep product out of the reach of children and pets to avoid chewing and swallowing.
- 3.Never use old and new batteries or different types of batteries together. Remove the batteries when you are not using the system for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion. Batteries are not included.
- 4.Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
- 5.Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
- 6.Do not expose to heat, water, moisture, direct sunlight!
- 7.Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
- 8.The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
- 9.Only charge with supplied Adaptor. The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable. So, make sure there is space around the power outlet for easy access.
- 10.Do not use non original accessories together with the product as this can make the product functionality abnormal.

Short Operating Instructions

PRODUCT OVERVIEW

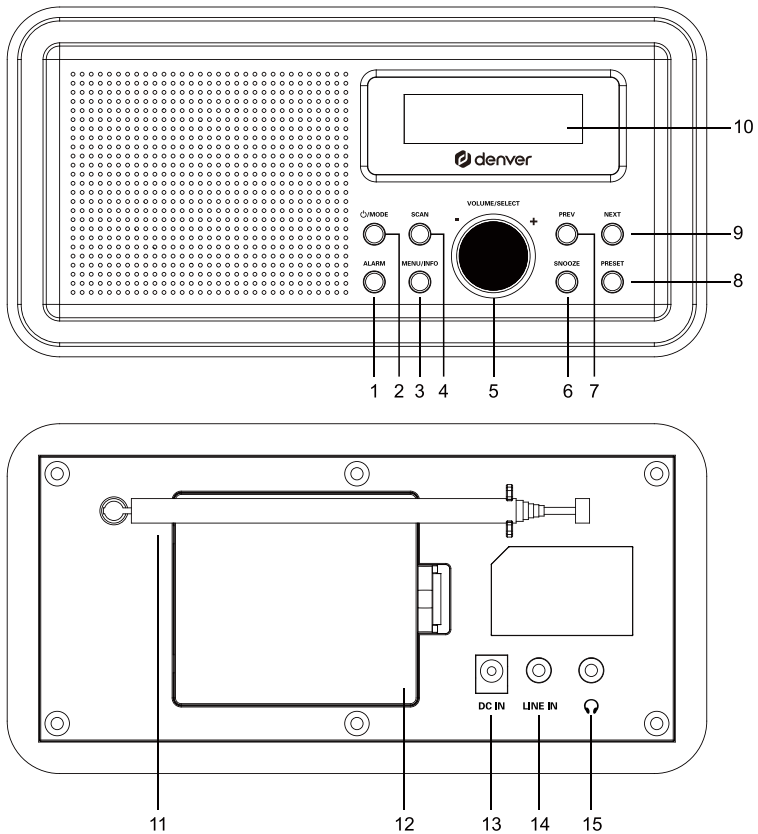

- | | | | |
|---|----------------------|----|---------------------|
| 1 | ALARM button | 8 | PRESET button |
| 2 | ⏻/MODE button | 9 | NEXT button |
| 3 | MENU/INFO button | 10 | LCD display |
| 4 | SCAN button | 11 | Antenna |
| 5 | VOLUME/SELECT button | 12 | Battery compartment |
| 6 | SNOOZE button | 13 | DC input jack |
| 7 | PREV button | 14 | LINE IN jack |
| | | 15 | Earphone jack |

Power on/off

Press briefly the /MODE button to switch on the product.

Press and hold the /MODE button to switch the product to standby.

Press and hold the /MODE button again to switch off the product.

FM Mode

SCAN button

Press briefly the **SCAN** button to automatically search and store the available FM stations.

PRESET button

Press the PRESET button to view the stored FM stations.

Press briefly the PREV/NEXT button to select a stored FM station, then press the VOLUME/SELECT button to confirm the selection.

Press and hold the PRESET button to enter the programming mode, then press briefly the PREV/NEXT button to allocate a number from 1 to **20** to the current radio station, then press the VOLUME/SELECT button to confirm.

MENU button

Press briefly the MENU button to display various information of the current FM station.

Press and hold the MENU button to display the following menu options: Scan Setting, Audio Setting System. Press briefly the PREV/NEXT button to select an option, then press the VOLUME/SELECT button to confirm the selection.

PREV/NEXT button

Press and hold the PREV/NEXT button to automatically tune to a FM station. Press briefly and repeatedly the PREV/NEXT button to fine tune FM frequencies.

VOLUME/SELECT button

Adjust the volume, or confirm a selection.

DAB Mode

MODE button

Press the MODE button to switch to the DAB mode. The local DAB stations are searched and stored automatically.

SCAN button

Press briefly the SCAN button to search and store available DAB stations automatically.

PRESET button

Press the PRESET button to view the stored DAB stations.

Press briefly the PREV/NEXT button to select a stored DAB station, then press the VOLUME/SELECT button to confirm the selection.

Press and hold the PRESET button to enter the programming mode, then press the PREV/NEXT button to allocate a number from 1 to **20** to the current DAB station, then press the VOLUME/SELECT button to confirm.

MENU button

Press the MENU button to display various information of the current DAB station.

Press and hold the MENU button to display the following menu options: Full scan, **and DRC**

Prune System. Press briefly the PREV/NEXT button to select an option, then press the VOLUME/SELECT button to confirm the selection.

NEXT button

Press briefly the PREV/NEXT button to select a stored DAB station, then press the VOLUME/SELECT button to confirm the selection.

VOLUME/SELECT button

Adjust the volume, or confirm a selection.

Alarm Mode

ALARM button

Press briefly the ALARM button to select alarm 1, and press again the ALARM button to select alarm 2.

Press briefly the PREV/NEXT button to select alarm options, then press the VOLUME/SELECT button to confirm the selection.

SNOOZE button

When the alarm rings, press the SNOOZE button to stop ringing, and the alarm rings at a 10-minute interval.

AUX mode

Press the MODE button to switch to the AUX mode, and connect an external audio device to the LINE IN jack.

MENU button

Press briefly the MENU button to display various information of AUX mode. Press and hold the MENU button to display an option, then press the VOLUME/SELECT button to confirm the selection.

VOLUME/SELECT button

Adjust volume.

SCAN /PRESET /PREV/NEXT buttons are invalid in the AUX mode.

Using earphones

You can connect your earphones with a 3.5mm plug (not included) to the Earphone jack on this product.

SPECIFICATIONS

Power supply	Output DC5V  1000mA Input: AC 100-240V 50/60Hz
Battery type	4 x AA batteries (not supplied)
DAB	174 MHz to 240 MHz
FM	87.5 MHz to 108 MHz

Manufacturer's name or trade mark, commercial registration number and address	DongGuan Obelieve Electronic Co.,Ltd. 9144190005507476980 Huazhaoxin Industrial park B-4F, Golden phoenix Industrial Zone,Fenggang Town,Dongguan,Guangdong Province,China
Model identifier	OBL-0501000E
Input voltage	100~240V
Input AC frequency	50/60Hz
Output voltage	5.0V
Output current	1.0A
Output power	5.0W
Average active efficiency	76.52%
Efficiency at low load (10%)	- - -
No-load power consumption	0.081W

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type DAB-30 is in compliance with Directive 2014/53 /EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: DAB-30 Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range:DAB:174MHz to 240 MHz 、 FM: 87.5MHz to 108 MHz

Max Output Power:20W/2W RMS

Power/AMPS: 1x2W

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Contact

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustes y Louis Lumiere, nº 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain
Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:
Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
support.de@denver.eu

Fairfixx GmbH
Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: +49 851 379 369 69
E-Mail: denver@fairfixx.de

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu



Version 1.1