 




CPR-700

INSTRUCTION MANUAL

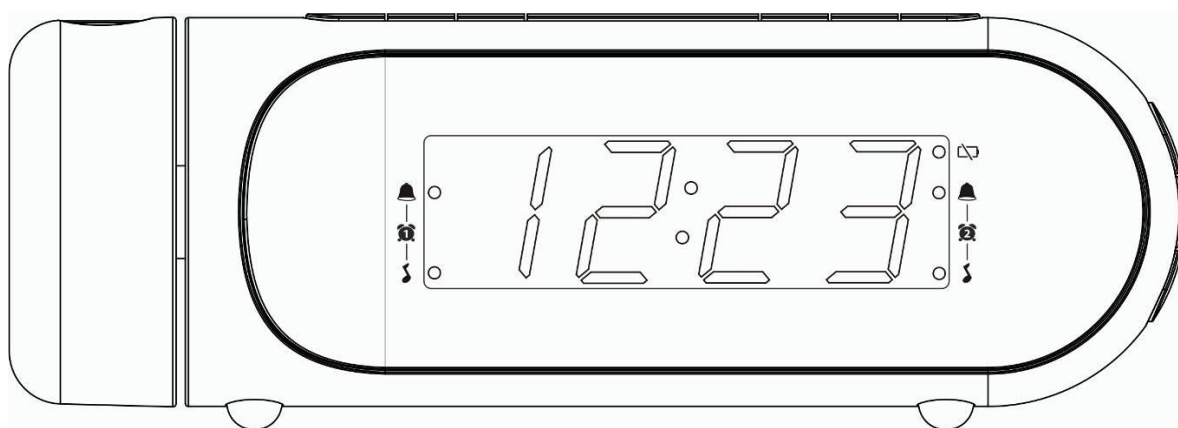

denver.eu
facebook.com/denver.eu
03/26



FR

Cet appareil et
ses cordons sont
recyclables

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE

OU

 
 
 
 


Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Remove the batteries when you are not using the system for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion. Batteries are not included.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sunlight!
7. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
8. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
9. The direct power cable is used as disconnect device, the disconnect device shall remain readily operable. So, make sure there is space around the power outlet for easy access.
10. Do not use non original accessories together with the product as this can make the product functionality abnormal.

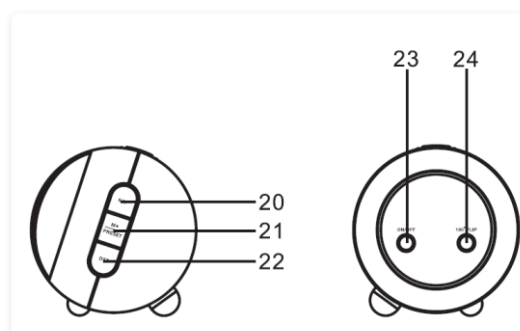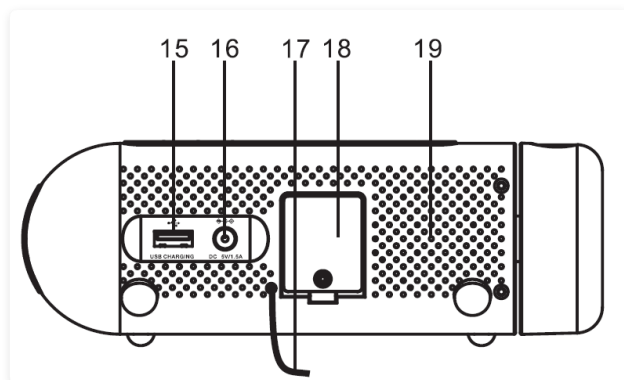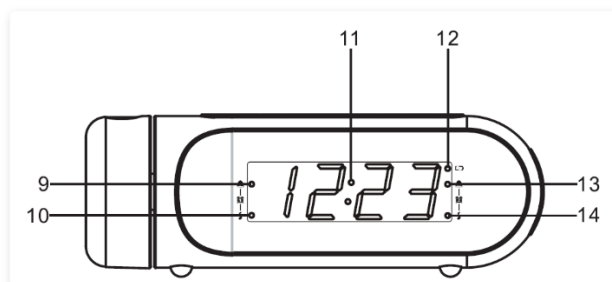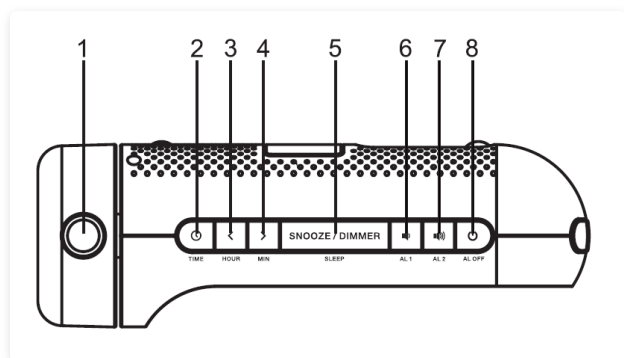

1. Projector lens
2. TIME button
3. < BACK / HOUR button
4. > FORWARD / MIN button
5. SNOOZE / SLEEP / DIMMER button
6. ALARM 1 / VOL DOWN button
7. ALARM 2 / VOL UP button
8. POWER / ALARM OFF button
9. Alarm 1 indicator (alarm)
10. Alarm 1 indicator (radio)
11. Display
12. BATT LOW (Low back-up battery warning indicator)
13. Alarm 2 indicator (alarm)
14. Alarm 2 indicator (radio)
15. USB charging port
16. DC IN jack
17. Antenna
18. Battery compartment
19. Speaker
20. NAP button
21. PRESET/M+ button
22. DST button
23. PROJECTOR ON/OFF button
24. 180° FLIP button

Connecting to power

1. Connect the cord of the power adapter to the DC IN jack of the radio.
2. Connect the plug of the power adapter to a wall socket.

The radio is powered and in standby mode when you see the display is switched on.

Backup system

- The radio is equipped with a backup system. It requires a 3 V lithium battery (type: CR2032).
- If a power cut occurs, the radio automatically switches to battery power and keeps the clock and timer settings (only backup, it will not show time and alarm).

Setting the clock

In standby mode, press and hold the TIME button to enter the clock setting mode.

- **Setting the time:** Press the BACK button to set the hours and press the FORWARD button to set the minutes.
- Press the TIME button to confirm each setting option.

Listening to radio

1. Press the POWER button to switch the radio on.
 2. Press the BACK or FORWARD buttons to adjust the frequency.
 3. Press and hold the BACK or FORWARD buttons to automatically tune into the next available FM station.
 4. Press the POWER button to switch the radio off.
- ** Unroll and extend the antenna to improve FM signal reception.

Setting preset stations

You can store up to 10 preset stations.

1. Tune to a station.
2. Press and hold the PRESET/M+ button until "P01" (or the next available preset slot) shows on the display.
3. Press the BACK or FORWARD buttons to select a preset number (P01-P10).
4. Press the PRESET/M+ button to confirm. The preset station has been set.
5. Press the PRESET/M+ button repeatedly while listening to the radio to select a preset station. Alternatively, press the PRESET/M+ button once and then press the BACK or FORWARD button to select a preset station.

Using the alarms

Setting alarms

The radio lets you set 2 different alarm. To set the alarms:

1. In standby mode, press and hold the ALARM 1 or ALARM 2 buttons to enter the alarm time setting mode.
2. In alarm setting mode, press the ALARM 1 or ALARM 2 buttons repeatedly to cycle through the setting options:

Alarm time > Alarm source

- **Setting alarm time:** Press the BACK button to set the hours and press the FORWARD button to set the minutes.
- **Setting the alarm source:** Press the BACK or FORWARD buttons to select alarm or radio as the alarm source. The corresponding alarm indicator will turn on.

Once the alarm setting is done, the alarm will be automatically activated with the corresponding alarm indicator (alarm or radio) switched on.

Turning the alarms on or off

When the clock time is displayed, press the ALARM 1 or ALARM 2 buttons to enable or disable the respective alarm. The corresponding Alarm 1 or Alarm 2 indicator (alarm or radio) will switch on when the alarm is enabled.

Deactivating a sounding alarm

- Press the ALARM OFF button to switch off a sounding alarm.
- When the alarm sounds, the corresponding Alarm 1 or Alarm 2 indicator (alarm or radio) flashes on the display.

Snooze

- To temporarily silence a sounding alarm, press the SNOOZE button. The alarm will sound again when the snooze period (9 minutes) is over.
- The corresponding Alarm 1 or Alarm 2 indicator (alarm or radio) flashes on the display during the snooze period.
- To cancel the snooze period and the alarm, press the ALARM OFF button.

Sleep timer

- This sleep function defines the duration of time before the radio switches off automatically.
- When the radio is switched on, press the SLEEP button repeatedly to select a sleep period (Options: 90, 80, 70, 60, 50, 40, 30, 20, 10 minutes and Off).
- The radio will automatically switch off when the sleep period is over.
- Press the SLEEP button to check the remaining time before the radio switches off.
- Press the POWER button to cancel this function.

Display brightness

Press the DIMMER button to change the brightness level (low, high or off).

Daylight saving time (DST)

Press and hold the DST button to activate daylight saving time when it is in force in your area. Press and hold the DST button to deactivate this function.

Projector

Press the PROJECTOR ON/OFF button to project the current time on wall or ceiling. Rotate the projector (up to 180°) to adjust the projection angle.

Press the 180° FLIP button to flip the projected image.

NOTE: PROJECTS TIME IMAGE ON THE CEILING OR WALL OF A DARKENED ROOM. PROJECTION RANGE IS 90 - 270 CM.

Built-in USB charger to charge external devices

Connect an external device (e.g. smartphone, MP3 player) via USB cable (not provided) to the USB jack on the back of the radio for charging. The radio cannot access the contents in the connected external device.

Specifications

Tuner Range:	FM: 87.5 – 108 MHz
Number of preset radio stations:	10
Amplifier Rated Output Power:	450mW (RMS)
Adaptor Manufacturer's name/ Address :	DongGuan Obelieve Electronic Co., Ltd. Huazhaoxin industrial park B-4/F, Golden Phoenix Ind. Zone, Fenggan town, Dongguan. China.
Commercial registration number:	91441900050747698U
Adaptor Model number:	OBL-0501500E
Input voltage:	AC 100-240V
Input AC frequency:	50/60Hz, 0.3A Max
Output voltage:	5.0Vdc
Output current:	1.5A
Output power:	7.5 W
Average active efficiency:	≥76.65 %
Efficiency at low load (10%):	78.8 %
No-load power consumption:	≤0.1W

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type CPR-700 is in compliance with Directive 2014/53/EU. The full text of the RED declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: CPR-700. Now enter product page, and RED directive is found under downloads/other downloads.

Information on standby/off mode power consumption and power management for products compliant with Commission Regulation (EU) 2023/826 can be found at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: CPR-700 and enter the page.

Operating Frequency Range: FM 87.5 – 108 MHz
Max audio output power: 450mW RMS

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.denver.eu

www.facebook.com/denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**
E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustes y Louis Lumiere, n° 23 – nave
16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Germany

Denver Germany GmbH Service
Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**
E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

Spain

Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

If your country is not listed above,
please write an email to
contact.hq@denver.eu



Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

