



WTK-441

Denver.eu


04/2024



Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Keep product out of the reach of pets to avoid chewing and swallowing.
2. All battery inserting, and removal must only be done under adult supervision. After battery change the screw for battery department must be mounted on the battery lid in order to avoid children opening battery compartment and access the batteries and keep batteries away from swallowing.
Never use old and new batteries or different types of batteries together. Remove the batteries when you are not using the product for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion. Batteries are not included. Exhausted batteries must be removed from the product. Do not short-circuit the supply terminals
3. Product operating and storage temperature is from 0 degree Celsius to 40 degrees Celsius. Under and over this temperature might affect the function.
4. Never open the product. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Do not use non original accessories together with the product as this can make the product functionality abnormal.
8. Cleaning with dry cloth. Do not clean with water, soap or any abrasive cleaner as the product is not waterproof.

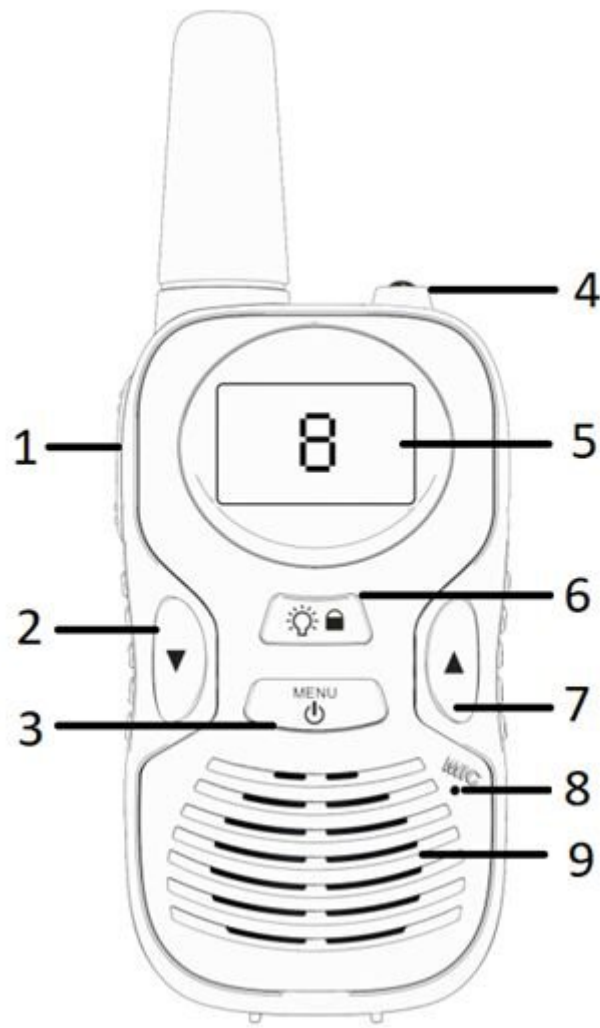

1. Push to talk (PTT) button.
2. Down button.
3. Power / MENU button.
4. Flashlight
5. LED display
6. Flashlight ON/OFF and lock button.
7. Up button
8. Microphone
9. Speaker

Install the batteries

Batteries not included.

Parental supervision is mandatory for this operation.

1. Remove belt clip by pressing in the direction of the arrow and push belt buckle upwards.



2. Remove the safety screw to make access to battery compartment.



3. Slide the battery cover down.



-
4. Install three AAA batteries in accordance with the correct positive and negative polarity.



Add front cover



Product includes 2 blue and 2 pink front covers which are interchangeable.

Remove the front panel

Lift front panel carefully here.



Operating the unit

1. Turning unit ON/OFF

After inserting the battery, press and hold the MENU button for 1 second to turn on the unit. If nothing happens please check that the batteries has been inserted correctly and that the batteries have power.

Press and hold MENU button for 1 second to turn off the unit.

2. Transmitting (sending speech)

a. Press and hold the PTT (Push to talk) button to transmit your voice. The transmit signal icon will show "P" will show in the display.

b. Hold the unit in vertical position with the MIC (microphone) 2-3 cm away from the mouth. Talk into the microphone in a normal tone of voice and while holding the PTT (Push to talk) button.

c. Release the PTT (Push to talk) button when you have finished transmitting. When the signal has been received "A" icon will be displayed on the screen. The unit will be in receiving mode when the unit is turned ON and there is no transmitting.

Important: Both parties need to be on the same channel.

3. Channel settings

Press MENU button one time and the current channel will be displayed. Press the UP or DOWN button to change the channel. There are 8 channels to choose from.

4. Volume settings

Press MENU button twice and the and the current volume level will show. Press UP the DOWN button to change the volume.

There are 3 levels:

- L: Low volume
- C: Medium volume
- H: High Volume

5. Flashlight function

Press the lamp button and the flashlight turns on. Function only works if the unit is ON.

6. Key lock function

Press and hold the LAMP/LOCK button for 1 second and the buttons on the unit buttons UP/DOWN will be locked and show "b" in the display indicating that the unit is locked. You can still long press the MENU button to turn the unit off. Press and hold the LAMP/LOCK button for 1 second to unlock.

7. Batteries

We recommend to only use non rechargeable AAA alkaline batteries for the unit.

Battery caution:

- a) Please use AAA size alkaline batteries.
- b) Please do not mix new and old batteries it will shorten the battery time overall.
- c) Do not mix Alkaline, Carbon-Zinc and rechargeable (Ni-Cd, Ni-MH, etc.) batteries.

8. Reset the unit

Take out one pcs of battery from the walkie talkie compartment, then hold the MENU button and LOCK button together while inserting the AAA battery again. Then the unit will turn on and show "8" and "E" and then last "1" in the display. Release the 2

buttons and the unit has been reset.

European Frequency

CH	FREQ(MHz)	CTCSS(Hz)
1	446.00625	62.5
2	446.01875	62.5
3	446.03125	62.5
4	446.04375	62.5
5	446.05625	62.5
6	446.06875	62.5
7	446.08125	62.5
8	446.09375	62.5

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type WTK-441 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: WTK-441. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range: 446,00625 – 446,09375 mhz
Max Output Power: 0,5W

DENVER A/S

Omega 5A, Soeflen

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu