



MCP-6010

denver.eu

01/2026



SAFETY INFORMATION

01

To ensure proper and safe use of this product and to avoid personal injury or property damage, please read all instructions and warnings in the product manual carefully before use.

1. Do not disassemble this product by yourself. Improper operation may result in fire hazards. Disassembled products are not eligible for return or exchange.
2. Do not use corrosive chemicals or cleaning agents to clean this product.
3. Only charge with supplied USB cable.
4. If you notice smoke or unusual smells coming from the product or power adapter, immediately unplug the power adapter to avoid burns.
5. Keep the printer out of reach of children.
6. Keep the printer away from water and other liquids that could damage the components.
7. This pocket photo printer is a precision device. Avoid exposing it to moisture, sand, dust, or dirt, and do not drop it.
8. The printer requires the corresponding Android or iOS application to function. Please download the app before use.

Warning: This product includes lithium polymer batteries.

• Denver A/S reserve the rights for print errors

Denver A/S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice.

If you detect any inaccuracies or omissions, please inform us at the address on the back cover.


BEFORE YOU START

02

- Fully charge the printer before first use (5V / 0.5A).
- Download the required Labelnize app (available for Android & iOS only).
- Operating temperature: 10-35°C.

• Insert the Photo Paper

1. Open the back cover.

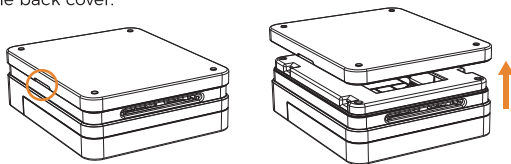


2. Insert the photo paper with the print side facing down.
3. Insert up to 10 sheets at a time (except for magnetic paper, which is limited to 1 sheet).
4. Close the cover securely.

• Install the Ink Cartridge

1. Power on the printer.
2. Slide down the front cover.


3. Wait 10 seconds for the cartridge to move to the center position.

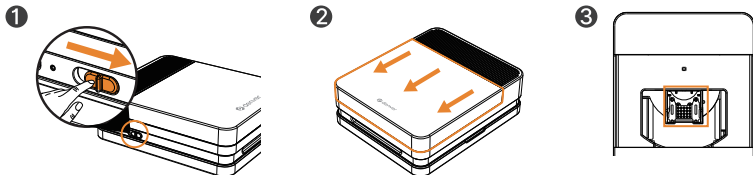

4. Remove the safety tape from the cartridge. Avoid touching the inkjet nozzles.

5. Insert the cartridge until it snaps into place magnetically.

6. Slide the cover back into place.

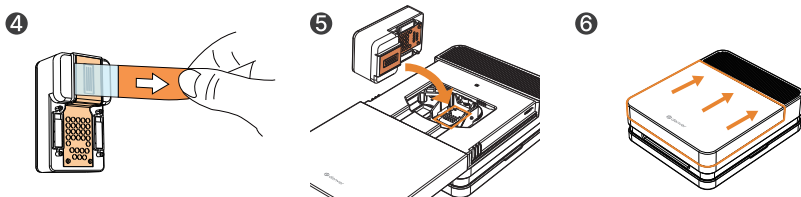

• Maintain Inkjet Nozzles

1. Print at least once a week to prevent the inkjet nozzles from drying out.

2. If the inkjet nozzles become dry, you can clean them via the app. Open the Labelnize app, choose "Clean Print Head", and follow the on-screen instructions.


• Download the App

- Turn on the device.
- Scan the QR code or search for "Labelnize" in the App Store or Google Play Store.
- Enable Bluetooth and Location permissions on your smartphone.



• Print Photos

1. Power on the printer by sliding the button on the side.
2. Open the Labelnize app on your smartphone.
3. In the Labelnize app, navigate to the top-left corner to connect to the Denver MCP-6010.
4. Select the content you want to print.
5. After choosing a picture, you may edit it (optional).
6. Tap "Print", select your preferred print style (photo or fast), and confirm to start printing.

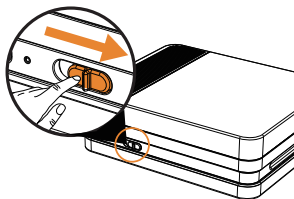

• Indicator Lights

- **Blue flashing:** Not connected
- **Orange solid:** Charging
- **White solid:** Standby
- **Orange flashing:** Low battery / Cover is open / No paper
- **White flashing:** Printing

• Basic Specifications

- **Printing Technology:** Inkjet
- **Battery capacity:** 800 mAh
- **Resolution:** 600 dpi
- **Input power:** DC 5V / 0.5A
- **Paper size:** 52.3 × 90 mm

• Maintenance Tips

- Do not pull the paper out during printing.
- Print at least once a week to prevent the inkjet nozzles from drying out.
- Keep the printer dry and clean.
- Store paper in a dry, shaded area.

HOW TO USE THE DIFFERENT TYPES OF PAPER?

03

• Photo Paper



Step 1: Print

Place the white photo paper in the printer's paper tray with the print side facing down, and select your desired image or photo in the app.

Step 2: Cut out

Use the entire picture as is, or carefully cut it into your desired shape with scissors.

• Sticker Photo Paper



Step 1: Print

Place the white photo paper in the printer's paper tray with the print side facing down and the peel tab positioned toward the output end, and select your desired image or photo in the app.

Step 2: Cut out

Use the entire picture as is, or carefully cut it into your desired shape with scissors.

Step 3: Peel

To use the adhesive side, gently lift and pull the peel tab at the bottom to separate the backing from the sticker.

• Heat Transfer Photo Paper



• Safety Warnings

Minor volatiles may be released from the adhesive during heating. Always operate in a well-ventilated area. The heat press and freshly pressed fabric are extremely hot.

Always wear heat-resistant gloves to avoid direct skin contact. Allow the transferred design to cool completely (below 40°C) before peeling off the film to prevent pattern tearing.

Even with safety certifications, this product is not intended for high-abrasion applications.

Therefore, it is expressly prohibited for use on children's sleepwear, gloves, shoe tops, or other high-friction areas to prevent potential physical damage and ingestion risks.

• Heat Press Guide

1. Printing & Preparation

(1) Place the white heat transfer paper in the tray with the blank side facing down, and select your desired image or photo in the app.

(2) Cut Out: Choose to keep the whole picture or cut along the design outline.

(3) Remove Backing Paper: Peel off the product's original backing paper.

2. Positioning on Fabric

(1) Place the transfer paper onto the flat fabric with the design facing up.

(2) Completely cover it with the protective paper (baking sheet), which is essential to prevent the transfer paper from scorching during the heat pressing process.

3. Heat Pressing

Temperature: 150-160 °C (for cotton/blends) / 170-190 °C (for polyester)

Pressure: Apply firm, even pressure

Duration: 12-15 seconds (adjust based on fabric thickness)

Cool & Peel: Wait for at least 10 seconds of cooling, then slowly peel off the top release film.

4. Unsuitable Applications

⊖ Not Suitable For:

(1) Nylon

(2) Waterproof Coated Fabrics

(3) Artificial Leather

5. Post-Press Care

The adhesion strength continues to increase for up to 24 hours after the pressing process. For optimal wash durability, we recommend waiting 48 hours after application before the first wash.

Washing Recommendations:

1. Turn the garment inside out.

2. Wash in water below 40°C (104°F).

3. Avoid strong bleach and fabric softeners.

4. Hand wash or use a gentle machine cycle.
5. Air dry or tumble dry on low heat. Avoid ironing directly on the design.

• Water Transfer Photo Paper



Safety Precautions & Warnings

Age Restriction: Recommended for adult use. Not suitable for children under 13 years of age. Use by children must be under direct adult supervision to prevent accidental ingestion or misuse.

Skin Sensitivity Test: Before full application, perform a patch test. Apply a small piece of the tattoo to a discrete area (e.g., inner arm) and wait 24 hours to check for any signs of allergic reaction, such as redness, itching, or swelling.

Discontinue use immediately if any irritation occurs.

Do Not Apply to the Following Areas

- Eyes, eyelids, and the immediate surrounding area.
- Lips, inside the mouth, and mucous membranes.
- Broken, irritated, sunburned, or diseased skin (e.g., cuts, rashes, eczema, psoriasis).
- Areas with recent scars or tattoos.

Ingestion Hazard

The product components are not intended for ingestion. If swallowed, seek immediate medical assistance.

Flammability

Keep away from fire and high-heat sources.

Eye Contact

In case of accidental contact with the eyes, rinse immediately with plenty of clean water. If irritation persists, seek medical advice.

Application Instructions

Step 1: Print

Place the white tracing paper in the printer's paper tray with the printed side facing down, and select your desired image or photo in the app. (Please ensure mirror printing is enabled.)

NOTE: After printing, let the sticker lie flat at room temperature (25°C) for at least 90 seconds to ensure the ink is completely dry.

Step 2: Transfer

Peel off the blue transfer sticker and apply it completely over the design, ensuring that it covers the photo evenly. Use a tissue to help press the two sheets together.

Step 3: Cut Out

Carefully cut out the design along its outline using scissors. Leaving a small white border can improve the result.

Step 4: Apply

Slowly peel off the transparent film, then firmly place the tattoo design side (glue side) onto clean, dry skin at the desired location.

Step 5: Wet

Thoroughly wet the backing paper (the water-soluble adhesive layer) attached to the pattern with water. Hold for approximately 15-20 seconds.

Step 6: Remove

Gently slide and remove the outer white backing paper. The pattern will now be completely transferred onto your skin.

Step 7: Dry

Gently blot away excess water with a clean towel or paper towel, then allow the tattoo to air dry completely to set the colors.

Daily Care:

- Avoid intense contact with water for the first hour after application.
- You can shower normally, but avoid scrubbing the tattooed area vigorously.
- When applying skincare products, sunscreen, or when sweating, press gently on the area; do not rub forcefully.

Removal Method: Gently wipe the applied area with baby oil, an alcohol pad, or clear tape for easy removal.

Magnetic Photo Paper



Note: Only one sheet of magnetic photo paper can be inserted for printing at a time

1. Print: Load 1 piece of the magnetic photo paper into your printer with the photo paper side (white glossy side) facing down.

2. Design: Use the app to create your desired design.

3. Dry: After printing, lay the paper flat and allow it to rest for 2-3 minutes to ensure the ink dries completely. Avoid touching the surface right away to prevent smudging.

4. Cut Out (Optional): Trim along the edges of your design using scissors or a paper cutter.

5. Attach: Place the cut magnetic photo paper directly onto any clean, dry magnetic-friendly surface (such as a refrigerator, whiteboard, or filing cabinet).

IMPORTANT PRECAUTIONS

04

- This product uses a flexible, low-intensity magnetic sheet, suitable for displaying lightweight photos or papers.

- NOT intended for holding heavy objects.

USAGE & STORAGE

05

• **Do Not Bend:** The product is relatively thick and rigid. Bending may crack the magnetic layer or cause the surface coating to peel, resulting in permanent damage.

• **Keep Away from Strong Magnets:** Store away from strong magnetic fields to prevent loss of magnetism.

- **Handle Wet Ink with Care:** Ensure the ink is fully dry before handling or using it to avoid scratching or smudging the glossy surface.
- **Magnetic Strength:** Flexible, low-intensity magnet

To ensure proper use of the printer, please read the full manual available via the QR code below: _____



WARNING!

06

- Lithium battery inside!
- Do not try to open the product!
- Do not expose to heat, water, moisture or direct sunlight!
- Only charge with the original charger supplied with this product!

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type MCP-6010 is in compliance with Directive 2014/53/EU. The full text of the RED declaration of conformity is available at the following internet

address: denver.eu and then click the search ICON on topline of website. Write model number: MCP-6010.

Now enter product page, and RED directive is found under downloads/other downloads. Alternatively, the QR code below can be scanned and the file can be accessed directly.

Hereby, Denver A/S declares that this connected device is in compliance with Data Act Regulation (EU) 2023/2854. The Data Act (EU) 2023/2854 product data sheet is available at the following internet address: denver.eu and then click the search ICON on topline of website.

Write model number: MCP-6010. Now enter product page, and the Data Act (EU) 2023/2854 product data sheet is found under downloads/other downloads.

Alternatively, the QR code below can be scanned and the file can be accessed directly.

Information on standby/off mode power consumption and power management for products compliant with Commission Regulation (EU) 2023/826 can be found at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: MCP-6010 and enter the page.



Bluetooth operating frequency range:

2400 MHz-2483,5 MHz

Max RF output power: 20 dBm

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.denver.eu

www.facebook.com/denver.eu

Contact

Maincontact point contact.hq@denver.eu

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900 -3437623**
E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23- nave
16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379369 40**

E-Mail

support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**
E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

If your country is not listed above,
please write an email to
contact.hq@denver.eu



Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

